

## Service Hints

### A9 (B) Alternator

(B) 1-Ground : **13.2–14.0** volts with the engine running **5000** rpm and **115 °C (239 °F)**

### : Parts Location

Code		See Page	Code		See Page	Code		See Page
A8	A	42 (RHD 1AZ–FE)	A9	B	44 (RHD 1CD–FTV)	F19		47 (RHD)
		44 (RHD 1CD–FTV)	C8		46 (RHD)	S16	A	49 (RHD)
A9	B	42 (RHD 1AZ–FE)	E10		47 (RHD)	S17	B	49 (RHD)

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	24 (RHD)	Instrument Panel J/B and Engine Wire (Left Side of Grove Box)
2I	22	Engine Room J/B and Engine Wire (Front Side of Left Suspension Tower)

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	62 (RHD 1AZ–FE)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
	64 (RHD 1CD–FTV)	
IL3	66 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)