

## System Outline

### Manual Lock Operation

All the doors are locked when the door lock control SW or the driver's side door key linked SW is operated to lock.

### Manual Unlock Operation

All the doors are unlocked when the door lock control SW or the driver's side door key linked SW is operated to unlock.

### Ignition Key Reminder Operation

The doors can not be locked unless the key is removed from the ignition key cylinder.

## Service Hints

### Body ECU

3, 25—Ground : Always approx. 12 volts

1—Ground : Always continuity

### U1 Unlock Warning SW

2—1 : Closed with the ignition key in cylinder

### D8, D9, D10, D11 Door Courtesy SW Front LH, RH, Rear LH, RH

1—Ground : Continuity with the door open

### B12 Back Door Courtesy SW

1—2 : Continuity with the back door open

## ○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B10	A	36 (LHD)	D20		40 (LHD)	J22		38 (LHD)
B12		40 (LHD)	D23		40 (LHD)	J36	A	40 (LHD)
B13		40 (LHD)	D24		40 (LHD)	J37	B	40 (LHD)
C8	A	36 (LHD)	H6		33 (LHD 1AZ–FE)	S18	A	39 (LHD)
C9	B	36 (LHD)			35 (LHD 1CD–FTV)	S19	B	39 (LHD)
D2		37 (LHD)	J1	A	38 (LHD)	S22	A	39 (LHD)
D8		40 (LHD)	J2	B	38 (LHD)	S23	B	39 (LHD)
D9		40 (LHD)	J4		38 (LHD)	U1		39 (LHD)
D10		40 (LHD)	J6		38 (LHD)			
D11		40 (LHD)	J16		38 (LHD)			

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IB		
IJ		
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
IM	25 (LHD)	Instrument Panel J/B and Floor Wire (Lower Finish Panel)
3A	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3C		
3E		
3F		
3H		
3I		
3J		
3K		

## Door Lock Control (LHD)



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IC2		
IC3		
II2	58 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IK1	58 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM1	58 (LHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BA1	60 (LHD)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	60 (LHD)	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)
BC1	60 (LHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	60 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)



: Ground Points

Code	See Page	Ground Points Location
IA	56 (LHD)	Left Kick Panel
IC	56 (LHD)	Right Kick Panel
BB	60 (LHD)	Front Side of the Left Quarter Panel
BF	60 (LHD)	Center of the Back Door Panel

