

# Engine Immobiliser System (LHD 1CD–FTV)

## Service Hints

### EFI Relay

5–3 : Closed with the ignition SW at **ON** position

### U1 Unlock Warning SW

2–1 : Closed with the ignition key in cylinder

## ○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
C8	A	36 (LHD)	I13		37 (LHD)	S20	A	39 (LHD)
C9	B	36 (LHD)	J13	A	38 (LHD)	S21	B	39 (LHD)
D6		37 (LHD)	J14	B	38 (LHD)	S24	A	39 (LHD)
D8		40 (LHD)	J16		38 (LHD)	S25	B	39 (LHD)
E7	A	37 (LHD)	J17		38 (LHD)	T8		39 (LHD)
E11	D	37 (LHD)	J21		38 (LHD)	U1		39 (LHD)

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IB		
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
3D	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3E		
3F		
3H		
3J		
3K		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	54 (LHD 1CD–FTV)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
IC1	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
ID2	56 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IL3	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EA	54 (LHD 1CD–FTV)	Left Radiator Side Support
EE	54 (LHD 1CD–FTV)	Near the Starter
IC	56 (LHD)	Right Kick Panel

