

## Service Hints

### EFI Relay

5-3 : Closed with the ignition SW at **ON** position

### U1 Unlock Warning SW

2-1 : Closed with the ignition key in cylinder

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	A	46 (RHD)	E11	E	47 (RHD)
C9	B	46 (RHD)	I13		47 (RHD)
E7	A	47 (RHD)	J3		48 (RHD)
E8	B	47 (RHD)	J16		48 (RHD)
E10	D	47 (RHD)	J19		48 (RHD)
				J26	48 (RHD)
				S32	A
				S33	B
				U1	49 (RHD)

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
3D	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3F		
3H		
3K		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	62 (RHD 1AZ-FE)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
ID2	66 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IL3	66 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EA	62 (RHD 1AZ-FE)	Left Radiator Side Support
EC	62 (RHD 1AZ-FE)	Intake Side of Cylinder Block
ED	62 (RHD 1AZ-FE)	Left Side of Cylinder Block
IC	66 (RHD)	Right Kick Panel

## ○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E13	62 (RHD 1AZ-FE)	Engine Wire			