

Service Hints

F15 Front Fog Light Relay

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position and fog light SW at **ON** position

○ : Parts Location

| Code | | See Page | Code | See Page | Code | | See Page |
|------|---|------------------|------|------------------|------|---|----------|
| B10 | A | 46 (RHD) | F4 | 42 (RHD 1AZ–FE) | J23 | A | 48 (RHD) |
| C8 | | 46 (RHD) | F4 | 44 (RHD 1CD–FTV) | J24 | B | 48 (RHD) |
| C12 | A | 46 (RHD) | F15 | 47 (RHD) | S32 | A | 49 (RHD) |
| | B | 46 (RHD) | J3 | 48 (RHD) | S33 | B | 49 (RHD) |
| F3 | | 42 (RHD 1AZ–FE) | J15 | 48 (RHD) | | | |
| F3 | | 44 (RHD 1CD–FTV) | J16 | 48 (RHD) | | | |

○ : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|---|
| 2 | 22 | Engine Room R/B (Front Side of Left Suspension Tower) |

○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|---|
| IA | 24 (RHD) | Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box) |
| IB | | |
| IL | 25 (RHD) | Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box) |
| 3F | 28 (RHD) | Center J/B and Instrument Panel Wire (Lower Finish Panel) |
| 3H | | |
| 3K | | |

□ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|-----------------|---|
| EE1 | 62 (RHD 1AZ-FE) | Engine Room Main Wire and Engine Room No.2 Wire (Under the Headlight LH) |
| EF1 | 62 (RHD 1AZ-FE) | Engine Room Main Wire and Engine Room No.2 Wire (Under the Headlight RH) |
| IC3 | 66 (RHD) | Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH) |

▽ : Ground Points

| Code | See Page | Ground Points Location |
|------|------------------|-----------------------------|
| EB | 62 (RHD 1AZ-FE) | Right Radiator Side Support |
| | 64 (RHD 1CD-FTV) | |
| IC | 66 (RHD) | Right Kick Panel |