

# Headlight (LHD w/ Daytime Running Light)

## System Outline

The daytime running light system operates and the HEADLIGHT and TAILLIGHT are turned ON when the ignition SW is ON and the body ECU TERMINAL "ALT L" ON condition is met with the light control SW at OFF position.

### Operation Cancel Condition

- \* Ignition SW is turned OFF from ON
- \* Light control SW is at HEAD or TAIL position

## Service Hints

### HEAD Relay

- 3-5 : Closed with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position
- Closed with the engine running

### DIMMER Relay

- 3-5 : Closed with the dimmer SW at **HIGH** or **FLASH** position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	32 (LHD 1AZ-FE)	H6	33 (LHD 1AZ-FE)	J8	38 (LHD)
	34 (LHD 1CD-FTV)		35 (LHD 1CD-FTV)	J9	38 (LHD)
B10	A	H7	33 (LHD 1AZ-FE)	J13	38 (LHD)
C8	36 (LHD)		35 (LHD 1CD-FTV)	J15	38 (LHD)
C12	36 (LHD)	H8	33 (LHD 1AZ-FE)	J23	A
H5	33 (LHD 1AZ-FE)		35 (LHD 1CD-FTV)	J24	B
	35 (LHD 1CD-FTV)	J3	38 (LHD)		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IJ		
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IE1	56 (LHD)	Engine Room Main Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IH1	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IL3	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
	54 (LHD 1CD-FTV)	
EB	52 (LHD 1AZ-FE)	Right Radiator Side Support
	54 (LHD 1CD-FTV)	
IA	56 (LHD)	Left Kick Panel

## ○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E7	52 (LHD 1AZ-FE)	Engine Room Main Wire	E7	54 (LHD 1CD-FTV)	Engine Room Main Wire

