

Service Hints

HEAD Relay

5-3 : Closed with the light control SW at **HEAD** position or dimmer SW at **FLASH** position

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
B10	A	36 (LHD)	H6	35 (LHD 1CD–FTV)	J8		38 (LHD)
C8		36 (LHD)	H7	33 (LHD 1AZ–FE)	J9		38 (LHD)
C12		36 (LHD)		35 (LHD 1CD–FTV)	J15		38 (LHD)
H5	33 (LHD 1AZ–FE)		H8	33 (LHD 1AZ–FE)	J23	A	38 (LHD)
	35 (LHD 1CD–FTV)			35 (LHD 1CD–FTV)	J24	B	38 (LHD)
H6		33 (LHD 1AZ–FE)	J3	38 (LHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IH1	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
	54 (LHD 1CD-FTV)	
EB	52 (LHD 1AZ-FE)	Right Radiator Side Support
	54 (LHD 1CD-FTV)	
IA	56 (LHD)	Left Kick Panel