

Service Hints

HEAD Relay

5-3 : Closed with the light control SW at **HEAD** position or dimmer SW at **FLASH** position

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
B10	A	46 (RHD)	H6	43 (RHD 1AZ–FE)	J3	48 (RHD)	
C8		46 (RHD)		45 (RHD 1CD–FTV)	J8	48 (RHD)	
C12	A	46 (RHD)	H7	43 (RHD 1AZ–FE)	J9	48 (RHD)	
	B	46 (RHD)		45 (RHD 1CD–FTV)	J15	48 (RHD)	
H5		43 (RHD 1AZ–FE)	H8	43 (RHD 1AZ–FE)	J23	A	48 (RHD)
		45 (RHD 1CD–FTV)		45 (RHD 1CD–FTV)	J24	B	48 (RHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IH1	68 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	62 (RHD 1AZ-FE)	Left Radiator Side Support
	64 (RHD 1CD-FTV)	
EB	62 (RHD 1AZ-FE)	Right Radiator Side Support
	64 (RHD 1CD-FTV)	
IC	66 (RHD)	Right Kick Panel