

☐ : Parts Location

Code		See Page	Code		See Page	Code		See Page
J1	A	38 (LHD)	J15	38 (LHD)	J24	B	38 (LHD)	
J2	B	38 (LHD)	J16	38 (LHD)	J32		40 (LHD)	
J3		38 (LHD)	J17	38 (LHD)	J33	A	40 (LHD)	
J4		38 (LHD)	J19	38 (LHD)	J34	B	40 (LHD)	
J8		38 (LHD)	J21	38 (LHD)	J35		40 (LHD)	
J9		38 (LHD)	J22	38 (LHD)	J36	A	40 (LHD)	
J10		38 (LHD)	J23	A	38 (LHD)	J37	B	40 (LHD)

☐ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)
5	23	Engine Room R/B No.4 (Left Side of Air Cleaner)
7	23	Engine Room R/B No.2 (Front Side of Left Suspension Tower)

☐ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
ID		
IJ		
IK	25 (LHD)	Instrument Panel J/B and Roof Wire (Lower Finish Panel)
IP	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
3A	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3B		
3D		
3F		
3G		
3H		
3I		
3J		
3K		

☐ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EF1	52 (LHD 1AZ-FE)	Engine Room Main Wire and Engine Room No.2 Wire (Under the Headlight RH)
IA1	56 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC2	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IF1	56 (LHD)	Instrument Panel Wire and Cowl No.2 Wire (Behind the Combination Meter)
IH1	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
II3	58 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IK1	58 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IL3		
BA1	60 (LHD)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	60 (LHD)	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)
BC1	60 (LHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BD1	60 (LHD)	Roof No.2 Wire and Floor No.2 Wire (Right Quarter Panel)
BE1	60 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

## I GROUND POINT (LHD)



### : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
	54 (LHD 1CD-FTV)	
EB	52 (LHD 1AZ-FE)	Right Radiator Side Support
	54 (LHD 1CD-FTV)	
EC	52 (LHD 1AZ-FE)	Intake Side of Cylinder Block
ED	52 (LHD 1AZ-FE)	Left Side of Cylinder Block
EE	54 (LHD 1CD-FTV)	Near the Starter
IA	56 (LHD)	Left Kick Panel
IB	56 (LHD)	Behind the Combination Meter
IC	56 (LHD)	Right Kick Panel
BA	60 (LHD)	Near the Interior Light
BB	60 (LHD)	Front Side of the Left Quarter Panel
BC	60 (LHD)	Left Quarter Panel
BD	60 (LHD)	Front Side of the Right Quarter Panel
BE	60 (LHD)	Right Quarter Panel
BF	60 (LHD)	Center of the Back Door Panel



### : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	52 (LHD 1AZ-FE)	Engine Room Main Wire	I2	58 (LHD)	Cowl No.2 Wire
	54 (LHD 1CD-FTV)		B1	60 (LHD)	Roof Wire
E2	52 (LHD 1AZ-FE)	Engine Wire	B3	60 (LHD)	Rear Door RH Wire
E3			B4	60 (LHD)	Rear Door LH Wire
E7	52 (LHD 1AZ-FE)	Engine Room Main Wire	B5	60 (LHD)	Roof No.2 Wire
	54 (LHD 1CD-FTV)		B6	60 (LHD)	Back Door No.2 Wire
I1	58 (LHD)	Cowl No.2 Wire			

