

Illumination (LHD)

Service Hints

B10 (A) Body ECU

3-Ground : Always approx. 12 volts

4-Ground : Approx. 12 volts with the ignition SW at **ON** position

TAIL Relay

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A25	36 (LHD)	I11	37 (LHD)	R6 A	38 (LHD)
B10 A	36 (LHD)	J3	38 (LHD)	R11	38 (LHD)
C6	36 (LHD)	J4	38 (LHD)	S10	39 (LHD)
C8	36 (LHD)	J10	38 (LHD)	S11	39 (LHD)
C12	36 (LHD)	J16	38 (LHD)	S14 A	39 (LHD)
H13	37 (LHD)	J17	38 (LHD)	S15 B	39 (LHD)
H14	37 (LHD)	J22	38 (LHD)		
H15	37 (LHD)	R4 C	38 (LHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IB		
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
IN		
3A	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3D		
3F		
3G		
3H		
3J		
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)

▽ : Ground Points

Code	See Page	Ground Points Location
IA	56 (LHD)	Left Kick Panel
IB	56 (LHD)	Behind the Combination Meter
IC	56 (LHD)	Right Kick Panel

