

# Illumination (RHD)

## Service Hints

### TAIL Relay

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A25	46 (RHD)	H13	47 (RHD)	R4	C
C6	46 (RHD)	H15	47 (RHD)	R6	A
C8	46 (RHD)	I11	47 (RHD)	R11	
C12	A	J3	48 (RHD)		
C12	B	J16	48 (RHD)		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IB		
IN	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3D		
3F		
3G		
3H		
3J		
3K		
4B	30 (RHD)	Center J/B No.2 and Instrument Panel Wire (Near the Steering Column)
4C		

## ▽ : Ground Points

Code	See Page	Ground Points Location
IB	66 (RHD)	Behind the Combination Meter
IC	66 (RHD)	Right Kick Panel

