

# Power Source

## Service Hints

### I14 Ignition SW

- 2-3 : Closed with the ignition key at **ACC** or **ON** position
- 2-4 : Closed with the ignition key at **ON** or **ST** position
- 7-6 : Closed with the ignition key at **ON** or **ST** position
- 7-8 : Closed with the ignition key at **ST** position
- 2-1 : Closed with the ignition key at **ST** position (A/T)

### ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
F19	37 (LHD)	J38	B	33 (LHD 1AZ-FE)	S28 A 49 (RHD)
	47 (RHD)			35 (LHD 1CD-FTV)	S29 B 49 (RHD)
I14	37 (LHD)	J39	A	33 (LHD 1AZ-FE)	
	47 (RHD)			35 (LHD 1CD-FTV)	

### ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)
5	23	Engine Room R/B No.4 (Left Side of Air Cleaner)
7	23	Engine Room R/B No.2 (Front Side of Left Suspension Tower)

### ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
	24 (RHD)	Instrument Panel J/B and Engine Wire (Left Side of Grove Box)
IH	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IN	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
IP	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
2I	22	Engine Room J/B and Engine Wire (Front Side of Left Suspension Tower)

### □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	52 (LHD 1AZ-FE)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
	54 (LHD 1CD-FTV)	
	62 (RHD 1AZ-FE)	
	64 (RHD 1CD-FTV)	
ID3	56 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IL3	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)
	66 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)

### ○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E7	52 (LHD 1AZ-FE)	Engine Room Main Wire	I7	58 (LHD)	Instrument Panel Wire
	54 (LHD 1CD-FTV)			68 (RHD)	

