

Service Hints

HTR SUB 1 Relay

- 1—Ground : Approx. **12** volts with the ignition SW at **ON** position
- 5—Ground : Always approx. **12** volts

HTR SUB 2 Relay

- 1—Ground : Approx. **12** volts with the ignition SW at **ON** position
- 5—Ground : Always approx. **12** volts

HTR SUB 3 Relay

- 1—Ground : Approx. **12** volts with the ignition SW at **ON** position
- 5—Ground : Always approx. **12** volts

: Parts Location

Code		See Page	Code		See Page	Code		See Page
E8	B	37 (LHD)	J16	38 (LHD)		W1		35 (LHD 1CD-FTV)
E10	C	37 (LHD)	P5	38 (LHD)				

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	23	Engine Room R/B No.4 (Left Side of Air Cleaner)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EC1	54 (LHD 1CD-FTV)	Engine Wire and Engine No.4 Wire (Near the Starter Motor)
ID2	56 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IG1	56 (LHD)	Cowl No.2 Wire and Engine Room Main Wire (Behind the Combination Meter)
IH2	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)