

## Service Hints

### H15 Heater Control Panel

- 1—Ground : Always approx. **12** volts
- 12—Ground : Approx. **12** volts with the ignition SW at **ON** position

### R18 Rear Cooler Relay

- 5—3 : Closed with the rear cooler SW at ON

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
H15	37 (LHD)	R13	41 (LHD)	R20	41 (LHD)
J16	38 (LHD)	R18	41 (LHD)		
J35	40 (LHD)	R19	41 (LHD)		

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
3E	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Groove Box)
3F		
3K		

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	58 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IJ1	58 (LHD)	Engine Room Main Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IM1	58 (LHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BD1	60 (LHD)	Roof No.2 Wire and Floor No.2 Wire (Right Quarter Panel)

## : Ground Points

Code	See Page	Ground Points Location
IC	56 (LHD)	Right Kick Panel
BD	60 (LHD)	Front Side of the Right Quarter Panel
BE	60 (LHD)	Right Quarter Panel

## : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B5	60 (LHD)	Roof No.2 Wire			