

## Service Hints

### R12 Remote Control Mirror SW

8–Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

7–Ground : Always continuity

8–6 : Continuity with the operation SW at **DOWN** or **RIGHT** position

8–7 : Continuity with the operation SW at **UP** or **LEFT** position

### ○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
J1	A	38 (LHD)	M1	40 (LHD)	R12	38 (LHD)
J2	B	38 (LHD)	M2	40 (LHD)		

### □ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
3A	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3C		
3F		
3K		

### □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IK1	58 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

### ▽ : Ground Points

Code	See Page	Ground Points Location
IC	56 (LHD)	Right Kick Panel