

Service Hints

R12 Remote Control Mirror SW

8-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

7-Ground : Always continuity

8-6 : Continuity with the operation SW at **DOWN** or **RIGHT** position

8-7 : Continuity with the operation SW at **UP** or **LEFT** position

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
J1	A	48 (RHD)	J3	48 (RHD)	M2	50 (RHD)
J2	B	48 (RHD)	M1	50 (RHD)	R12	48 (RHD)

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
3B	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3F		
3G		
3I		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	68 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK1	66 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	66 (RHD)	Right Kick Panel