

## System Outline

The rear fog light is turned on when the following conditions are met, and the rear fog light SW is ON.

\* Light control SW is at HEAD position

\* Light control SW is at TAIL position and the front fog light is ON

The rear fog light is turned off when the rear fog light SW is turned ON again or the light control SW is turned OFF.

## Service Hints

### B10 Body ECU

3—Ground : Always approx. **12** volts

4—Ground : Approx. **12** volts with the ignition SW at **ON** position

## ○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B10	A	46 (RHD)	J7		48 (RHD)	S16	A	49 (RHD)
C8		46 (RHD)	J16		48 (RHD)	S17	B	49 (RHD)
C12	A	46 (RHD)	J36	A	50 (RHD)	S32	A	49 (RHD)
	B	46 (RHD)	J37	B	50 (RHD)	S33	B	49 (RHD)
F15		47 (RHD)	R15		51 (RHD)			
J3		48 (RHD)	R17		51 (RHD)			

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IB		
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
IM	25 (RHD)	Instrument Panel J/B and Floor Wire (Left Side of Grove Box)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3H		
3K		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
ID2	66 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
BC1	70 (RHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	70 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

## ▽ : Ground Points

Code	See Page	Ground Points Location
IC	66 (RHD)	Right Kick Panel
BF	70 (RHD)	Center of the Back Door Panel