

Service Hints

RR DEF Relay

5-3 : Closed with the defogger SW at ON

○ : Parts Location

| Code | | See Page | Code | | See Page | Code | | See Page |
|------|---|----------|------|--|----------|------|---|----------|
| H15 | | 47 (RHD) | J16 | | 48 (RHD) | R25 | B | 51 (RHD) |
| J1 | A | 48 (RHD) | J22 | | 48 (RHD) | R26 | A | 51 (RHD) |
| J2 | B | 48 (RHD) | M1 | | 50 (RHD) | | | |
| J3 | | 48 (RHD) | M2 | | 50 (RHD) | | | |

○ : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|---|
| 2 | 22 | Engine Room R/B (Front Side of Left Suspension Tower) |

○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|---|
| IA | 24 (RHD) | Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box) |
| IB | | |
| IM | 25 (RHD) | Instrument Panel J/B and Floor Wire (Left Side of Grove Box) |
| IN | 25 (RHD) | Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box) |
| 3B | 28 (RHD) | Center J/B and Instrument Panel Wire (Lower Finish Panel) |
| 3F | | |
| 3J | | |
| 3K | | |
| 4A | 30 (RHD) | Center J/B No.2 and Instrument Panel Wire (Near the Steering Column) |
| 4B | | |

□ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|---|
| IA1 | 68 (RHD) | Front Door RH Wire and Instrument Panel Wire (Right Kick Panel) |
| BC1 | 70 (RHD) | Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel) |

▽ : Ground Points

| Code | See Page | Ground Points Location |
|------|----------|-------------------------------|
| IA | 66 (RHD) | Left Kick Panel |
| IC | 66 (RHD) | Right Kick Panel |
| BF | 70 (RHD) | Center of the Back Door Panel |