

## Service Hints

### R2 Rear Washer Motor

- 2—Ground : Approx. **12** volts with the ignition SW at **ON** position
- 1—Ground : Continuity with washer SW turned on

### R27 Rear Wiper Motor and Rear Wiper Relay

- 3—Ground : Approx. **12** volts with the ignition SW at **ON** position
- 2—Ground : Continuity with rear wiper SW at **INT** position
- 1—Ground : Continuity with rear wiper SW at **LO** position

## ○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
C10		36 (LHD)		J24	B	38 (LHD)		R27		41 (LHD)	
J3		38 (LHD)		R2		33 (LHD 1AZ–FE)					
J23	A	38 (LHD)				35 (LHD 1CD–FTV)					

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
IM	25 (LHD)	Instrument Panel J/B and Floor Wire (Lower Finish Panel)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
BC1	60 (LHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	60 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

## ▽ : Ground Points

Code	See Page	Ground Points Location
IA	56 (LHD)	Left Kick Panel