

Service Hints

R2 Rear Washer Motor

- 2—Ground : Approx. **12** volts with the ignition SW at **ON** position
- 1—Ground : Continuity with washer SW turned on

R27 Rear Wiper Motor and Rear Wiper Relay

- 3—Ground : Approx. **12** volts with the ignition SW at **ON** position
- 2—Ground : Continuity with rear wiper SW at **INT** position
- 1—Ground : Continuity with rear wiper SW at **LO** position

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
C10	B	46 (RHD)	J23	A	48 (RHD)	R2	45 (RHD 1CD-FTV)
	A	46 (RHD)	J24	B	48 (RHD)	R27	51 (RHD)
J3		48 (RHD)	R2		43 (RHD 1AZ-FE)		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
IM	25 (RHD)	Instrument Panel J/B and Floor Wire (Left Side of Grove Box)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
BC1	70 (RHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	70 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	66 (RHD)	Right Kick Panel