

Service Hints

S10, S11 Seat Heater SW LH, RH

4—Ground : Approx. 12 volts with the ignition SW at **ON** position

6—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J10	38 (LHD)	S8	39 (LHD)	S11	39 (LHD)
J32	40 (LHD)	S9	39 (LHD)	S12	B 39 (LHD)
J35	40 (LHD)	S10	39 (LHD)	S13	A 39 (LHD)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
3A	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3F		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
II1	58 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	56 (LHD)	Right Kick Panel
BC	60 (LHD)	Left Quarter Panel
BE	60 (LHD)	Right Quarter Panel