

Service Hints

S38 Stop Light SW

2-1 : Closed with the brake pedal depresses

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
H16		50 (RHD)	J37	B	50 (RHD)	R17	51 (RHD)
J33	A	50 (RHD)	R14		51 (RHD)	S38	49 (RHD)
J34	B	50 (RHD)	R15		51 (RHD)		
J36	A	50 (RHD)	R16		51 (RHD)		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IM	25 (RHD)	Instrument Panel J/B and Floor Wire (Left Side of Grove Box)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	70 (RHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BC2		
BE1	70 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

▽ : Ground Points

Code	See Page	Ground Points Location
BB	70 (RHD)	Front Side of the Left Quarter Panel
BF	70 (RHD)	Center of the Back Door Panel