

PICNIC (EWD450E)

The diagram is divided into four main sections, each representing a different part of the vehicle's electrical system:

- Power Source (Section 1):** This section shows the battery connected to the main power source (SB(V)). It includes the ignition switch (I14) with its associated relays (IG1, ST1) and fuses (7.5A ECU-B, 25A AM1, 30A DDC, 140A ALT). The main power line (W) is connected to the battery and the main fuse (FL MAIN 3.0W).
- Remote Control Mirror (Section 2):** This section shows the wiring for the remote control mirrors (M1, M2). It includes the remote control mirror switch (R12) and the mirror relays (IG1, IG2). The mirrors are connected to the main power source (W) and the ground (G).
- Light Reminder (Section 3):** This section shows the wiring for the light reminder system. It includes the light reminder switch (L12) and the light reminder relays (IG1, IG2). The light reminder system is connected to the main power source (W) and the ground (G).
- Light Reminder (Section 4):** This section shows the wiring for the light reminder system, including the light reminder switch (L12) and the light reminder relays (IG1, IG2). The light reminder system is connected to the main power source (W) and the ground (G).

The diagram uses a color-coded system for wires: Red (R), Blue (B), Yellow (Y), Green (G), and White (W). The components are labeled with their respective part numbers and names, and the wiring is shown with clear connections and labels.