


## Position of Parts in Instrument Panel

[LHD]

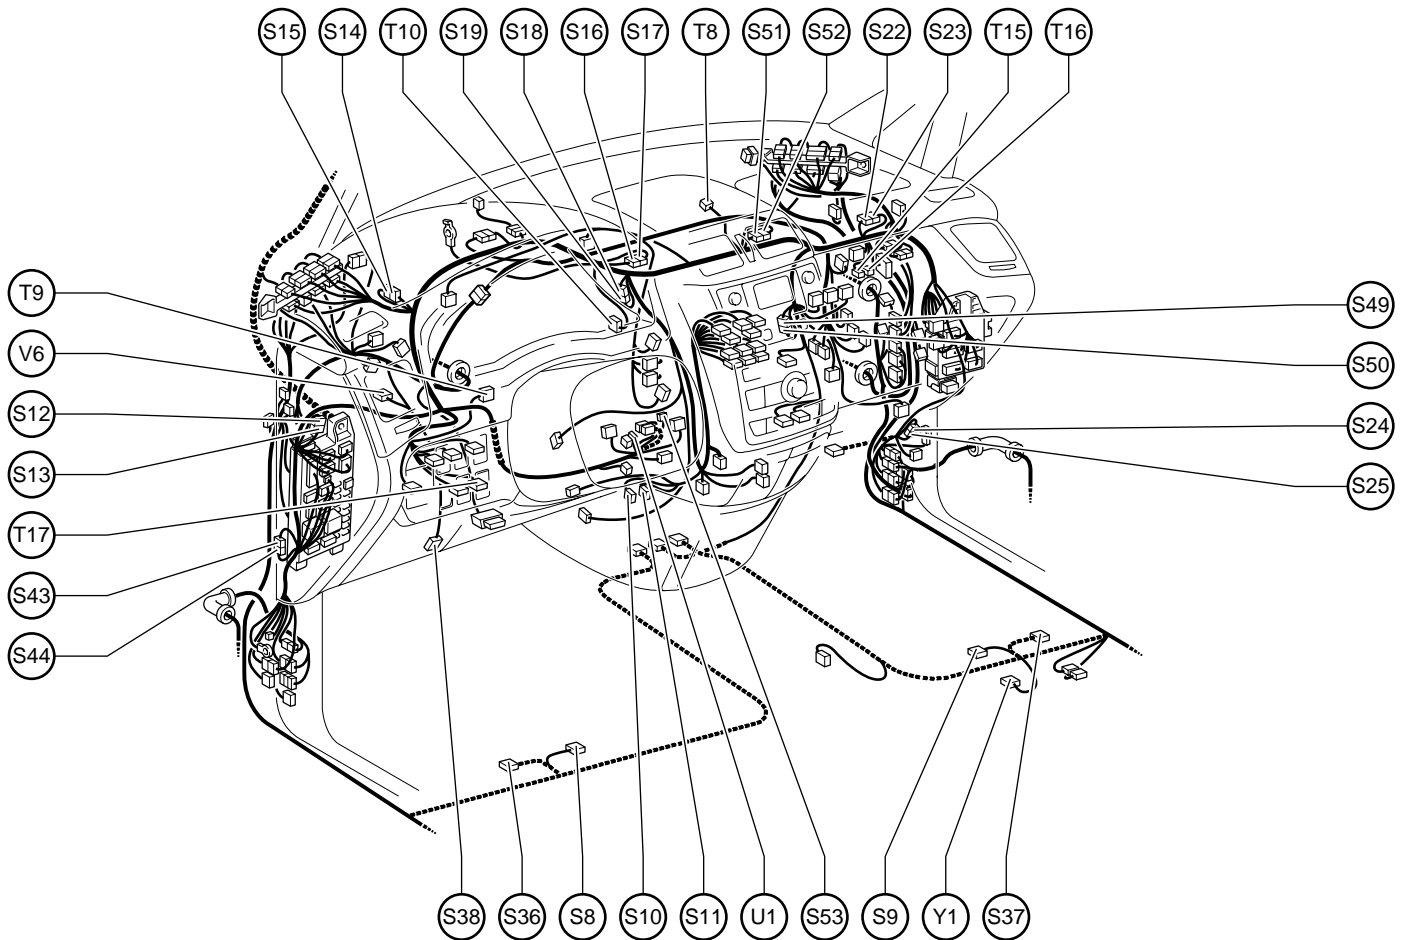

S 8 Seat Heater LH  
 S 9 Seat Heater RH  
 S10 Seat Heater SW LH  
 S11 Seat Heater SW RH  
 S12 Short Connector  
 S13 Short Connector  
 S14 Short Connector  
 S15 Short Connector  
 S16 Short Connector  
 S17 Short Connector  
 S18 Short Connector  
 S19 Short Connector  
 S22 Short Connector  
 S23 Short Connector  
 S24 Short Connector  
 S25 Short Connector  
 S36 Side Airbag Squib LH  
 S37 Side Airbag Squib RH  
 S38 Stop Light SW  
 S43 Short Connector  
 S44 Short Connector  
 S49 Short Connector  
 S50 Short Connector  
 S51 Short Connector  
 S52 Short Connector  
 S53 Steering Sensor

T 8 Transponder Key Computer  
 T 9 Turn Signal Flasher Relay  
 T10 TVSS ECU  
 T15 Television Camera ECU  
 T16 Television Camera ECU  
 T17 TRC OFF SW  
 U 1 Unlock Warning SW  
 V 6 VSC Warning Buzzer  
 Y 1 Yaw Rate Sensor