


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1CD-FTV]

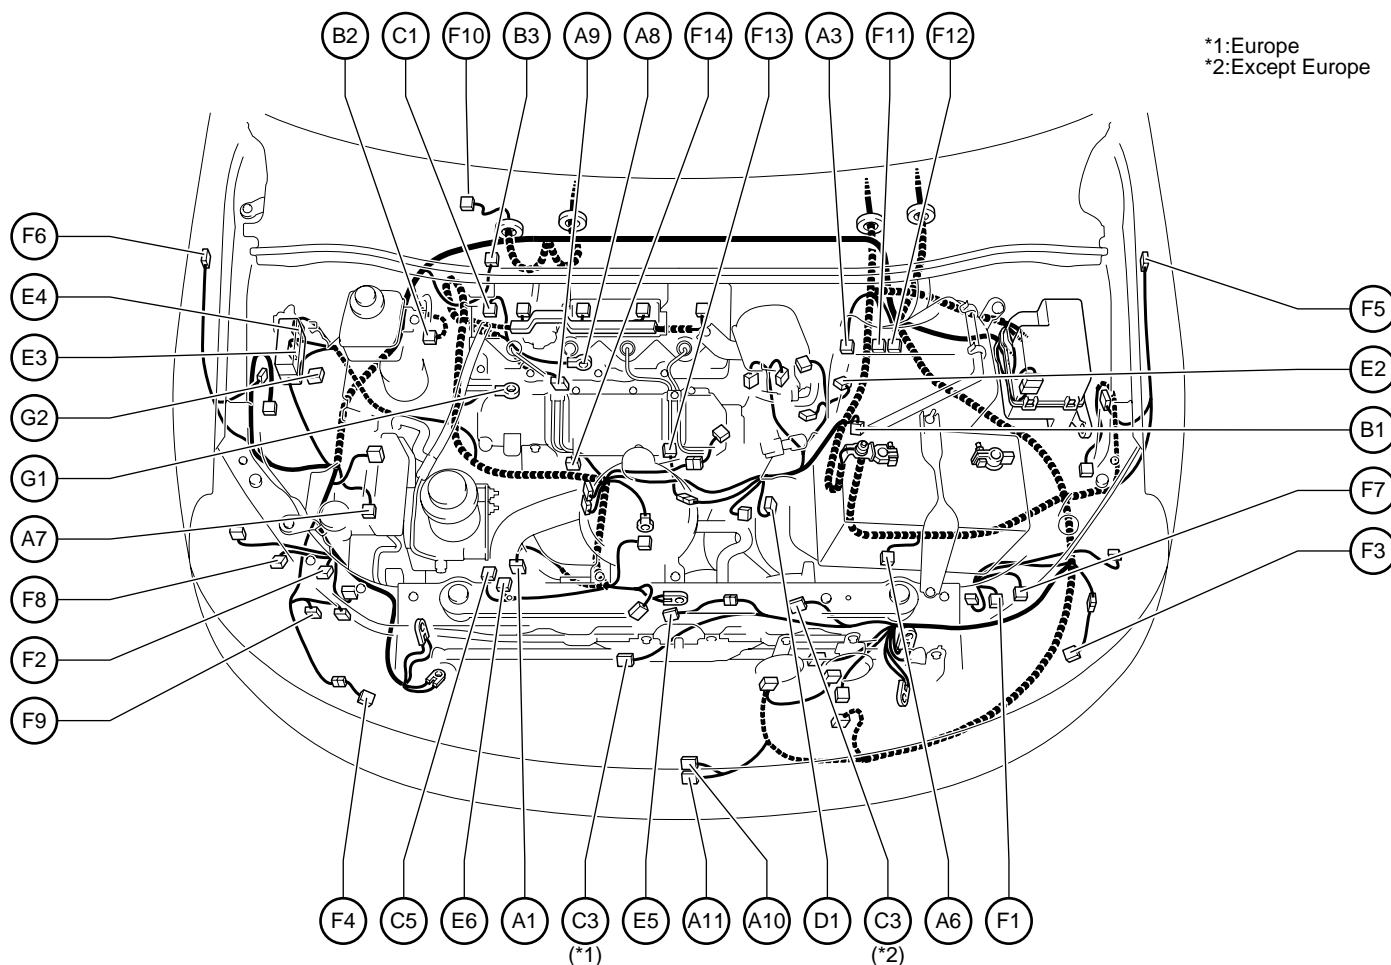

*1:Europe
*2:Except Europe

- | | |
|--|-------------------------------------|
| A 1 A/C Lock Sensor A/C Magnetic Clutch | E 2 EGR Valve Control Motor |
| A 3 Air Flow Meter | E 3 Electronic Driver Unit |
| A 6 Airbag Sensor Front LH | E 4 Electronic Driver Unit |
| A 7 Airbag Sensor Front RH | E 5 Engine Hood Courtesy SW |
| A 8 Alternator | E 6 Engine Oil Level Sensor |
| A 9 Alternator | |
| A10 Ambient Temp. Sensor No.1 | F 1 Front Clearance Light LH |
| A11 Ambient Temp. Sensor No.2 | F 2 Front Clearance Light RH |
| | F 3 Front Fog Light LH |
| B 1 Back-Up Light SW | F 4 Front Fog Light RH |
| B 2 Brake Fluid Level Warning SW | F 5 Front Side Turn Signal Light LH |
| B 3 Brake Vacuum Warning SW | F 6 Front Side Turn Signal Light RH |
| | F 7 Front Turn Signal Light LH |
| C 1 Camshaft Position Sensor | F 8 Front Turn Signal Light RH |
| C 3 Condenser Fan Motor | F 9 Front Washer Motor |
| C 5 Crankshaft Position Sensor | F10 Front Wiper Motor |
| | F11 Fuel Filter Warning SW |
| D 1 Diesel Throttle Control Motor | F12 Fuel Heater |
| | F13 Fuel Pressure Sensor |
| | F14 Fuel Temp. Sensor |
| | |
| | G 1 Glow Plug |
| | G 2 Glow Plug Relay |