


Position of Parts in Instrument Panel

[RHD]

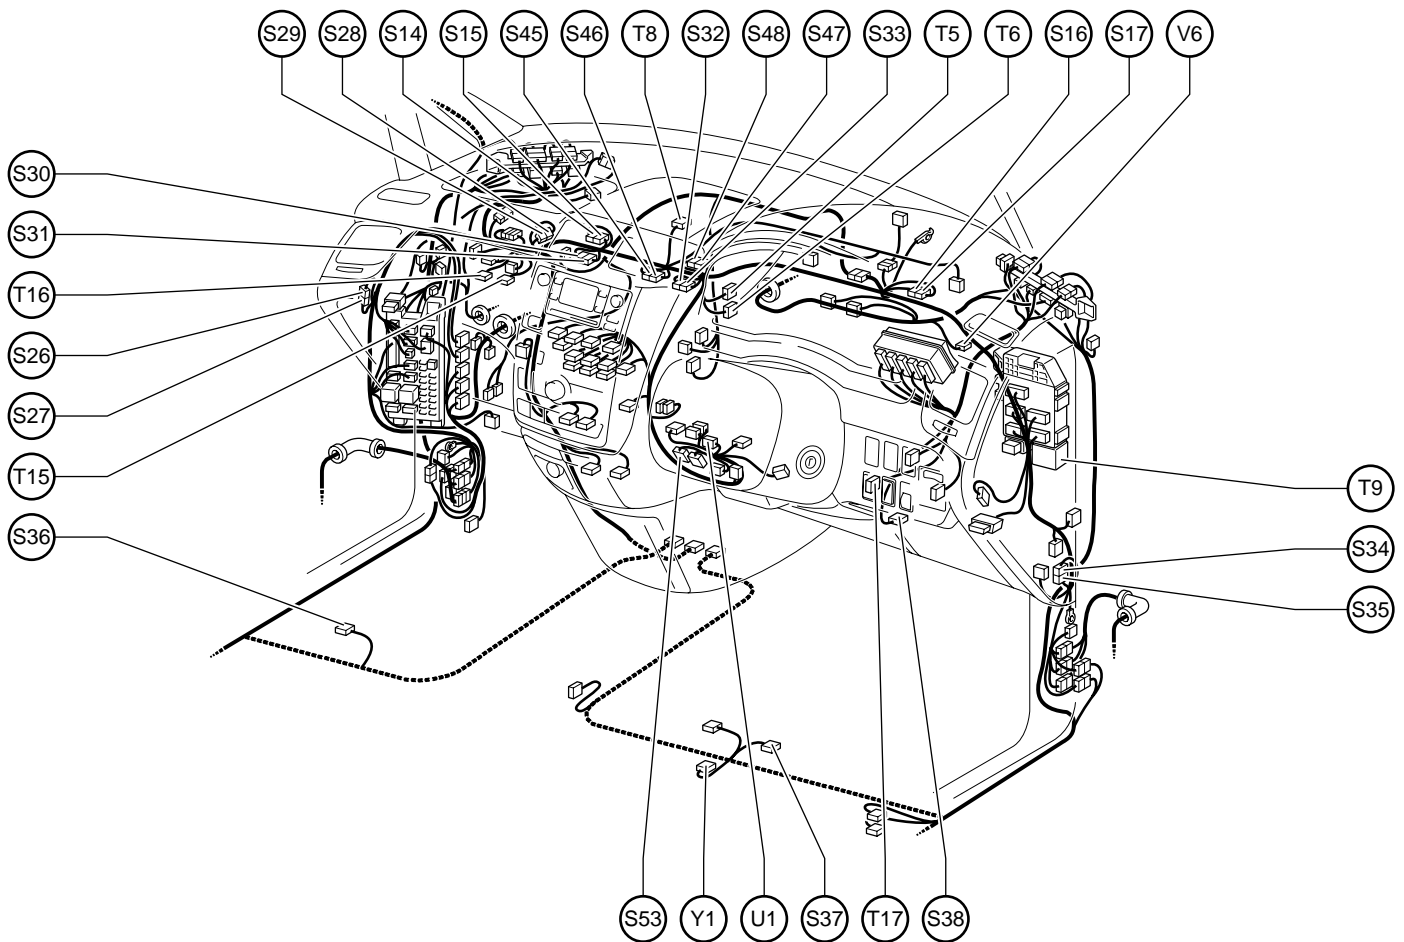

S14 Short Connector
 S15 Short Connector
 S16 Short Connector
 S17 Short Connector
 S26 Short Connector
 S27 Short Connector
 S28 Short Connector
 S29 Short Connector
 S30 Short Connector
 S31 Short Connector
 S32 Short Connector
 S33 Short Connector
 S34 Short Connector
 S35 Short Connector
 S36 Side Airbag Squib LH
 S37 Side Airbag Squib RH
 S38 Stop Light SW
 S45 Short Connector
 S46 Short Connector
 S47 Short Connector
 S48 Short Connector
 S53 Steering Sensor

T 5 Theft Deterrent ECU
 T 6 Theft Deterrent ECU
 T 8 Transponder Key Computer
 T 9 Turn Signal Flasher Relay
 T15 Television Camera ECU
 T16 Television Camera ECU
 T17 TRC OFF SW

U 1 Unlock Warning SW

V 6 VSC Warning Buzzer

Y 1 Yaw Rate Sensor