


## Connector Joining Wire Harness and Wire Harness

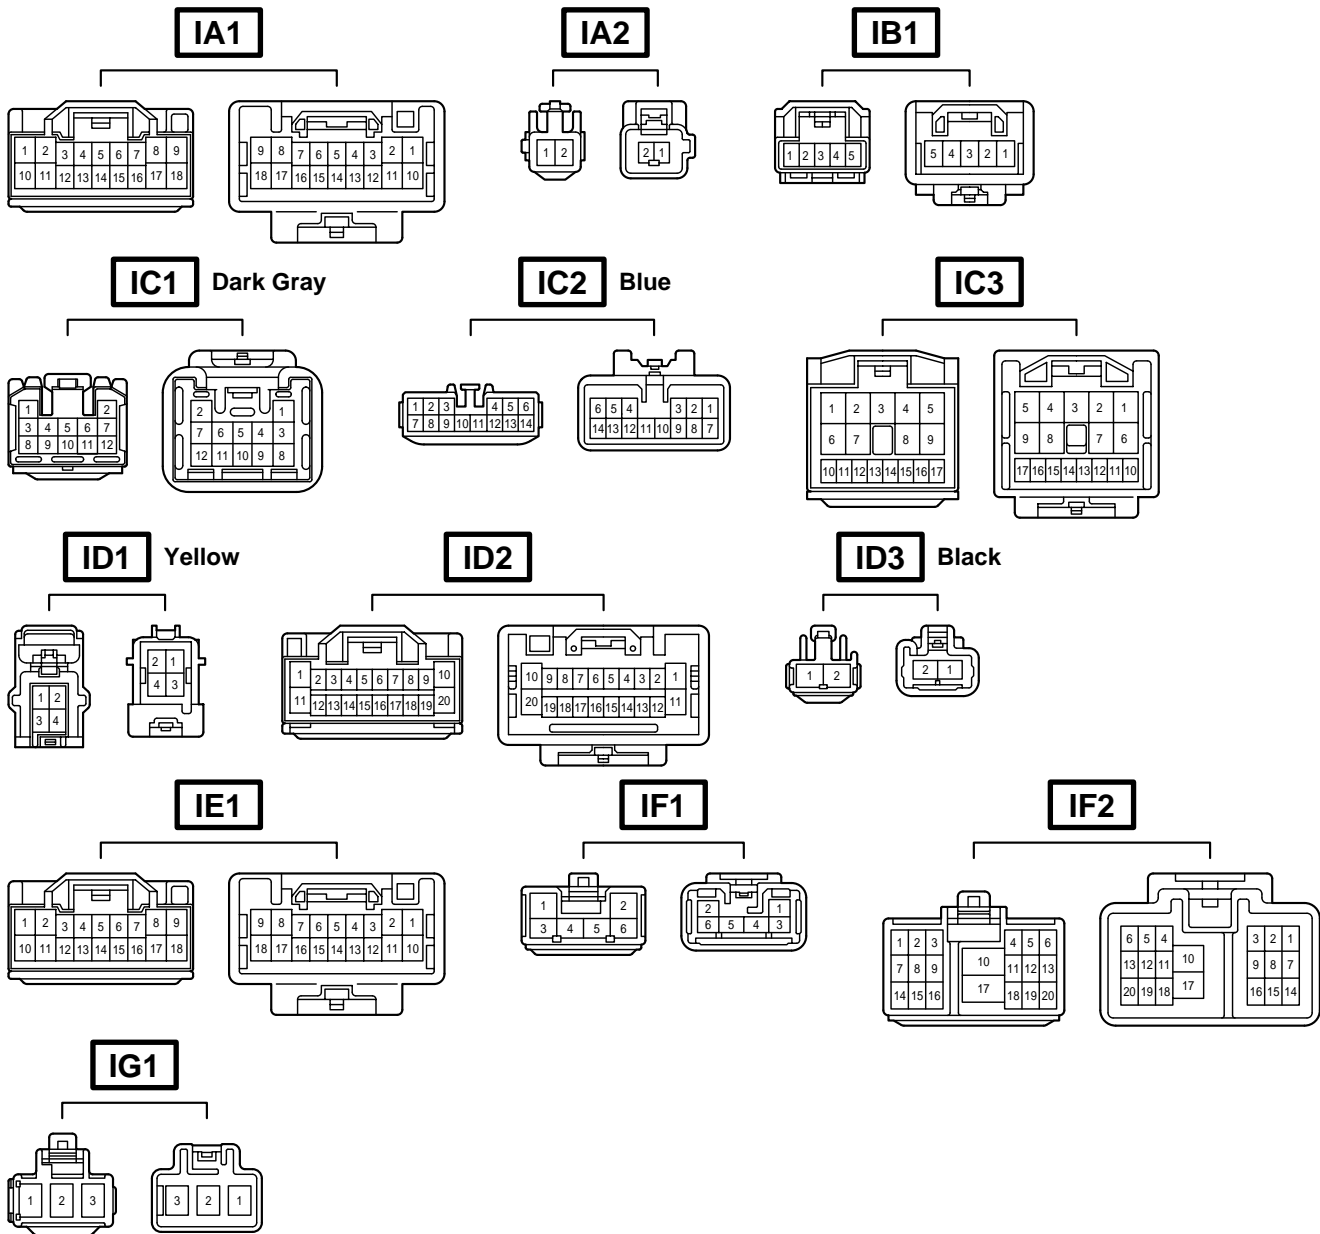

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2	
IB1	Instrument Panel Wire and Roof Wire (Upper Part of Front Body Pillar LH)
IC1	
IC2	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IC3	
ID1	
ID2	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
ID3	
IE1	Engine Room Main Wire and Floor Wire (Upper Part of Front Body LH)
IF1	
IF2	Instrument Panel Wire and Cowl No.2 Wire (Behind the Combination Meter)
IG1	Cowl No.2 Wire and Engine Room Main Wire (Behind the Combination Meter)