


## Connector Joining Wire Harness and Wire Harness

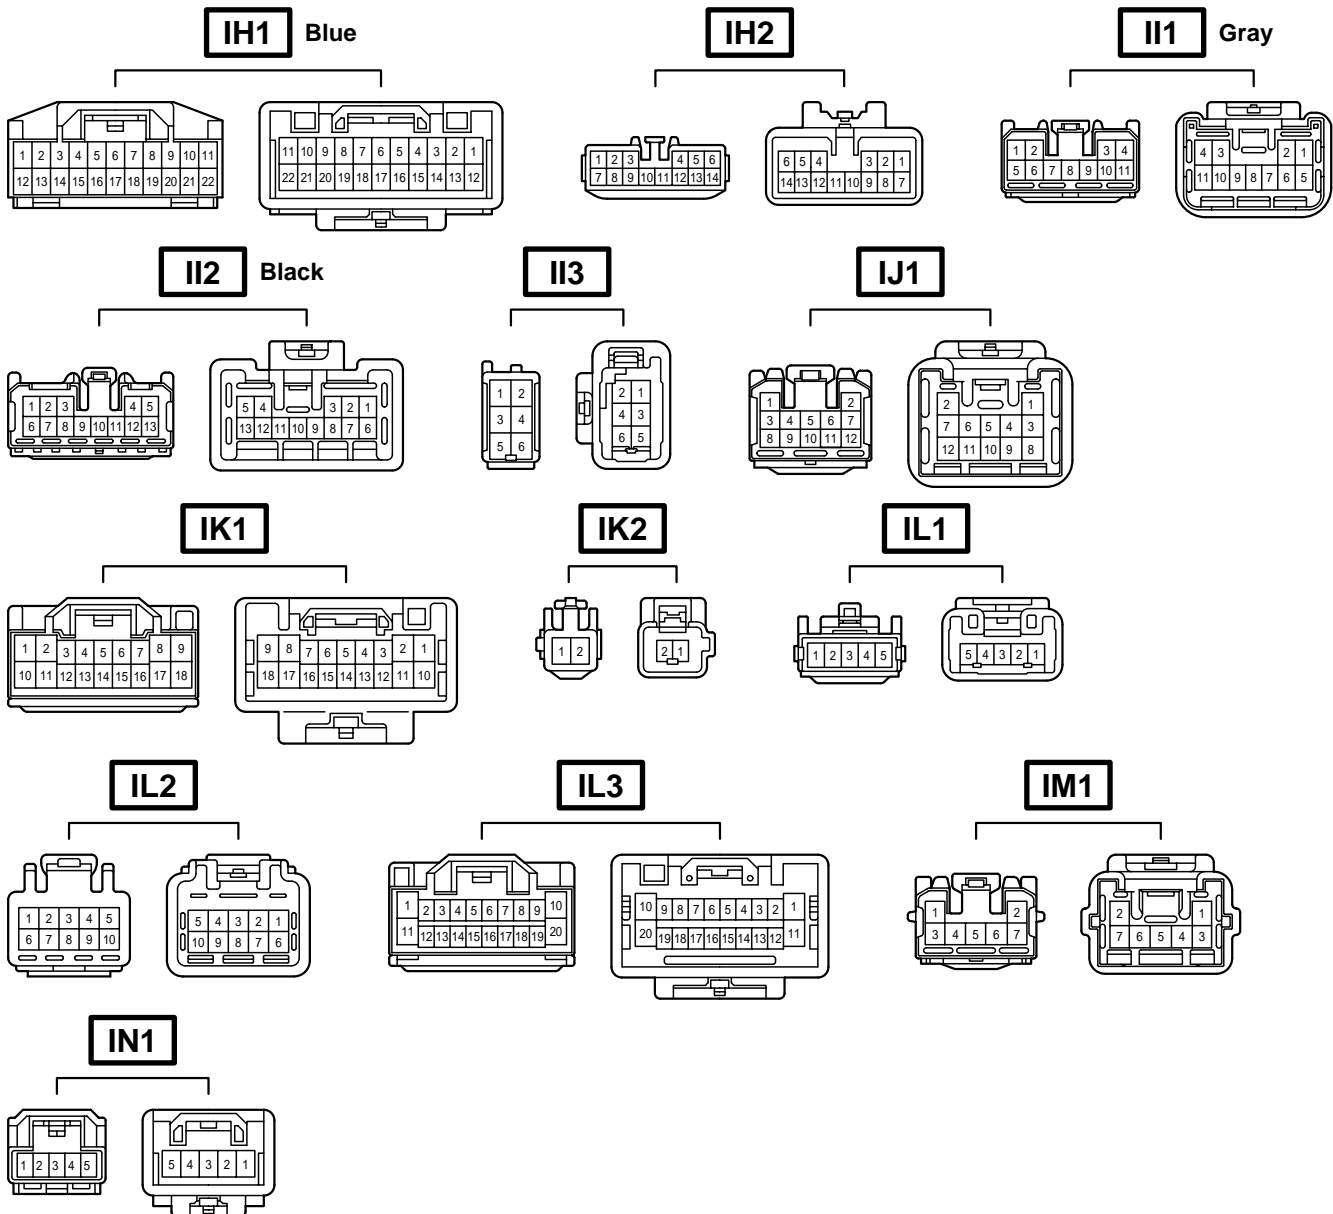

Code	Joining Wire Harness and Wire Harness (Connector Location)
IH1	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IH2	
II1	
II2	Instrument Panel Wire and Floor No.2 Wire (Upper part of Front Body Pillar RH)
II3	
IJ1	Engine Room Main Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IK1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK2	
IL1	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IL2	
IL3	
IM1	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IN1	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)