


Connector Joining Wire Harness and Wire Harness

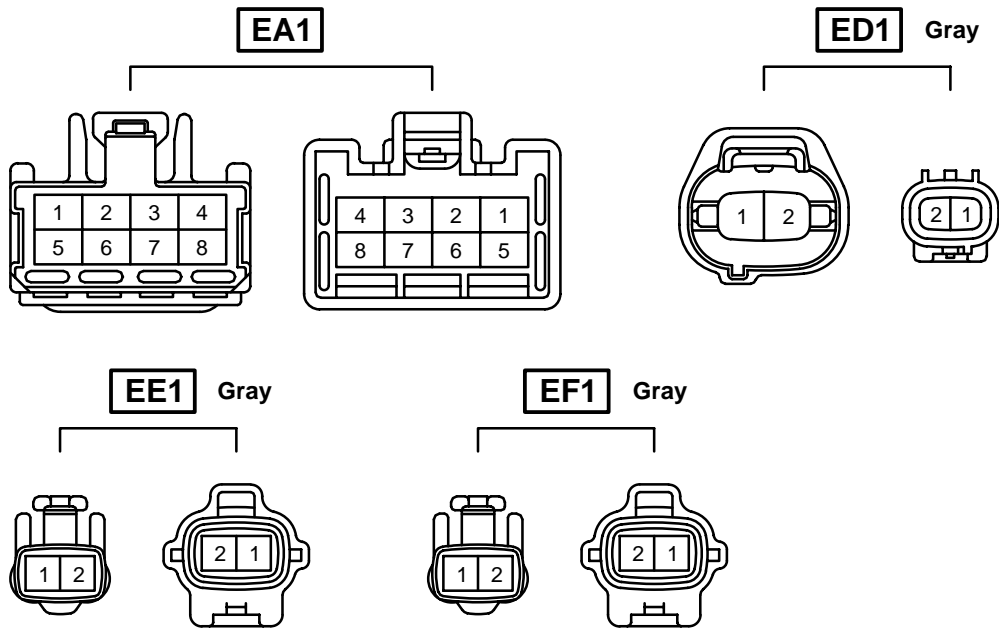

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|---|
| EA1 | Engine Wire and Engine Room Main Wire (Near the Engine Room R/B) |
| ED1 | Engine Room No.4 Wire and Engine Room Main Wire (Near the Radiator Fan Motor) |
| EE1 | Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight LH) |
| EF1 | Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight RH) |