

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Lock Sensor	90980-11016	B 9	Blower Resistor (Except Two Way Flow Heater)	90980-11136
	A/C Magnetic Clutch			Blower Resistor (Two Way Flow Heater)	90980-10976
A 2	A/T Indicator Light SW	90980-12362	B10	Body ECU	90980-11915
	Back-Up Light SW		B11	Buckle SW RH	82824-52020
	Neutral Start SW		B12	Back Door Courtesy SW	90980-10795
A 3	Air Flow Meter	Back Door Lock Motor			
A 4	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	B13	Back Door Opener SW	82824-52030
A 6	Airbag Sensor Front LH	90980-11856	B14	Battery Current Sensor Assembly	90980-12168
A 7	Airbag Sensor Front RH		B15	Battery Thermometer Sensor	90980-11156
A 8	Alternator	90980-09212	B16	Blower Motor Controller	90980-11676
A 9	Alternator	90980-11964	C 1	Camshaft Position Sensor	90980-10947
A10	Ambient Temp. Sensor No.1	90980-11070	C 2	Camshaft Timing Oil Control Valve	90980-11162
A11	Ambient Temp. Sensor No.2		C 3	Condenser Fan Motor	90980-10928
A12	A/C Amplifier	90980-12175	C 4	Counter Gear Speed Sensor	90980-11156
A13	A/C Amplifier	90980-11913	C 5	Crankshaft Position Sensor (Except 1CD-FTV)	90980-10947
A14	A/C Amplifier	90980-12173		Crankshaft Position Sensor (1CD-FTV)	90980-12028
A15	A/C Evaporator Temp. Sensor	90980-12128	C 6	Cigarette Lighter	90980-10795
A16	Accelerator Pedal Position Sensor	90980-11144	C 7	Circuit Opening Relay	82660-20340
A17	Air Inlet Control Servo Motor	90980-11909	C 8	Combination Meter	90980-12169
A18	Air Mix Control Servo Motor		C 9	Combination Meter	90980-12155
A19	Air Vent Mode Control Servo Motor		C10	Combination SW	90980-11594
A20	Airbag Sensor Assembly	90980-11873	C11	Combination SW	90980-12183
A21	Airbag Sensor Assembly	90980-11872	C12	Combination SW (Europe)	90980-11672
A22	Airbag Sensor Assembly	90980-11871		Combination SW (Except Europe)	90980-11671
A23	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	C13	Curtain Shield Airbag Squib LH	90980-11886
A24	Airbag Squib (Steering Wheel Pad)	90980-12160	C14	Curtain Shield Airbag Squib RH	
A25	Ashtray Illumination	90980-10355	D 1	Diesel Throttle Control Motor	90980-11144
A26	A/C Compressor	90980-11156	D 2	Diode	90980-11608
A27	Air Conditioner Pressure Sensor	90980-10845	D 3	Diode	
A28	A/C Control Assembly	90980-12200	D 4	Diode (Fan)	90980-11251
A29	A/C Control Assembly	90980-12169	D 5	Diode	90980-11608
A30	A/C Room Temp. Sensor	90980-12128	D 6	DLC3	90980-11665
A31	A/C Room Temp. Sensor	90980-11950	D 7	Double Door Lock ECU	90980-10807
A32	A/C Solar Sensor	90980-11918	D 8	Door Courtesy SW Front LH	90980-12340
A33	Antenna Amplifier	90980-10870	D 9	Door Courtesy SW Front RH	
B 1	Back-Up Light SW	90980-11250	D10	Door Courtesy SW Rear LH	
B 2	Brake Fluid Level Warning SW (LHD)	90980-11009	D11	Door Courtesy SW Rear RH	
	Brake Fluid Level Warning SW (RHD)	90980-11207	D12	Door Key Lock and Unlock SW Front LH	90980-10891
B 3	Brake Vacuum Warning SW	90980-11252		Door Lock Motor Front LH	
B 4	Back-Up Light Relay	82660-20340		Door Unlock Detection SW Front LH	
B 5	Blower Motor (Except Two Way Flow Heater)	90980-10214		Double Door Lock Motor Front LH	
	Blower Motor (Two Way Flow Heater)	90980-10903		Double Lock Position SW Front LH	
B 6	Blower Relay (HI)	82660-28230	D13	Door Key Lock and Unlock SW Front RH	90980-11858
B 7	Blower Relay (M1)	82660-20340		Door Lock Motor Front RH	
B 8	Blower Relay (M2)				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D14	Door Key Lock and Unlock SW Front LH	90980-11858	E10	Engine and ECT ECU (A/T) (Except 1CD-FTV)	90980-12145
	Door Lock Motor Front LH			Engine ECU (M/T) (Except 1CD-FTV)	
	Door Unlock Detection SW Front LH			Engine ECU (M/T) (1CD-FTV)	90980-11476
D15	Door Key Lock and Unlock SW Front RH	90980-10891	E11	Engine and ECT ECU (A/T) (Except 1CD-FTV)	90980-12144
	Door Lock Motor Front RH			Engine ECU (M/T) (Except 1CD-FTV)	
	Door Unlock Detection SW Front RH			Engine ECU (M/T) (1CD-FTV)	90980-11421
	Double Door Lock Motor Front RH		F 1	Front Clearance Light LH	90980-11156
	Double Lock Position SW Front RH		F 2	Front Clearance Light RH	
D16	Door Key Lock and Unlock SW Rear LH	90980-10891	F 3	Front Fog Light LH	90980-11660
	Door Lock Motor Rear LH		F 4	Front Fog Light RH	
	Door Unlock Detection SW Rear LH		F 5	Front Side Turn Signal Light LH	90980-11162
	Double Door Lock Motor Rear LH		F 6	Front Side Turn Signal Light RH	
	Double Lock Position SW Rear LH		F 7	Front Turn Signal Light LH	90980-11019
D17	Door Key Lock and Unlock SW Rear RH	90980-10891	F 8	Front Turn Signal Light RH	
	Door Lock Motor Rear RH		F 9	Front Washer Motor	90980-10981
	Door Unlock Detection SW Rear RH		F10	Front Wiper Motor	90980-11599
	Double Door Lock Motor Rear RH		F11	Fuel Filter Warning SW	90980-11003
	Double Lock Position SW Rear RH		F12	Fuel Heater	90980-10928
D18	Door Lock Control SW Front LH	90980-11947	F13	Fuel Pressure Sensor	90980-10845
	Power Window SW Front LH		F14	Fuel Temp. Sensor	90980-10737
D19	Door Lock Control SW Front RH	90980-11947	F15	Front Fog Light Relay	82660-20340
	Power Window SW Front RH		F16	Front Door Speaker LH	82824-52040
D20	Door Lock Control SW	90980-12166	F17	Front Door Speaker RH	
	Power Window Master SW		F18	Fuel Pump	90980-11077
D21	Door Lock Motor Front LH	90980-11019		Fuel Sender	
D22	Door Lock Motor Front RH		F19	Fuse Holder	82610-20080
D23	Door Lock Motor Rear LH		G 1	Glow Plug	99141-13006
D24	Door Lock Motor Rear RH		G 2	Glow Plug Relay	90980-11569
E 1	ECT Solenoid	90980-11658	G 3	Glass Breakage Sensor	90980-10799
E 2	EGR Valve Control Motor	90980-11144	G 4	Glass Breakage Sensor Microphone	90980-11368
E 3	Electronic Driver Unit	90980-11592	H 1	Headlight Beam Level Control Actuator LH	90980-11016
E 4	Electronic Driver Unit	90980-11024	H 2	Headlight Beam Level Control Actuator RH	
	Engine Hood Courtesy SW (LHD)	90980-10887	H 3	Headlight Cleaner Motor	90980-11410
E 5	Engine Hood Courtesy SW (RHD)	90980-11003	H 4	Headlight Cleaner Relay	90980-10939
	Engine Oil Level Sensor	90980-11235	H 5	Headlight LH (High)	90980-11659
E 7	Engine and ECT ECU (A/T) (Except 1CD-FTV)	90980-12146	H 6	Headlight LH (Low)	90980-11660
	Engine ECU (M/T) (Except 1CD-FTV)		H 7	Headlight RH (High)	90980-11659
	Engine ECU (M/T) (1CD-FTV)	90980-11638	H 8	Headlight RH (Low)	90980-11660
E 8	Engine and ECT ECU (A/T) (Except 1CD-FTV)	90980-12142	H 9	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-11028
	Engine ECU (M/T) (Except 1CD-FTV)		H10	Heated Oxygen Sensor (Bank 1 Sensor 2)	
	Engine ECU (M/T) (1CD-FTV)	90980-11637	H11	Horn (High)	90980-10619
E 9	Engine and ECT ECU (A/T)	90980-12143	H12	Horn (Low)	
	Engine ECU (M/T)				

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number	
H13	Headlight Beam Level Control SW	90980-10996	J21	Junction Connector	90980-12346	
H14	Headlight Cleaner SW	90980-11013	J22	Junction Connector	90980-11583	
H15	Heater Control Panel	90980-12175	J23	Junction Connector	90980-11661	
H16	High Mounted Stop Light	90980-11148	J24	Junction Connector		
I 1	Ignition Coil and Igniter No.1	90980-11885	J25	Junction Connector	90980-11542	
I 2	Ignition Coil and Igniter No.2		J26	Junction Connector	90980-11661	
I 3	Ignition Coil and Igniter No.3		J27	Junction Connector		
I 4	Ignition Coil and Igniter No.4		J28	Junction Connector		
I 5	Injector No.1 (Except 1CD-FTV)	90980-11875	J29	Junction Connector		90980-11542
	Injector No.1 (1CD-FTV)	90980-12005	J30	Junction Connector		
I 6	Injector No.2 (Except 1CD-FTV)	90980-11875	J31	Junction Connector	90980-11529	
	Injector No.2 (1CD-FTV)	90980-12005	J32	Junction Connector	90980-12345	
I 7	Injector No.3 (Except 1CD-FTV)	90980-11875	J33	Junction Connector	90980-11661	
	Injector No.3 (1CD-FTV)	90980-12005	J34	Junction Connector		
I 8	Injector No.4 (Except 1CD-FTV)	90980-11875	J35	Junction Connector	90980-10976	
	Injector No.4 (1CD-FTV)	90980-12005	J36	Junction Connector	90980-11661	
I 9	Intake Air Temp. Sensor	90980-11025	J37	Junction Connector		
I11	Idle-Up SW	90980-10933	J38	Junction Block	82671-44010	
I12	Ignition Key Cylinder Light	90980-11148	J39	Junction Block	90980-11775	
I13	Ignition Key Cylinder Light	90980-12092	J40	Junction Connector	90980-11542	
	Transponder Key Amplifier		K 1	Knock Sensor	90980-11875	
I14	Ignition SW	90980-11615	K 2	Kick Down SW	90980-11156	
I15	Interior Light (Front)	90980-10908	L 1	License Plate Light LH	90980-11148	
I16	Interior Light (Rear) (w/ Moon Roof)	90980-10935	L 2	License Plate Light RH		
	Interior Light (Rear) (w/o Moon Roof)	82824-52040	L 3	Luggage Compartment Light	90980-11187	
J 1	Junction Connector	90980-11661	M 1	Mirror Heater LH (w/ Mirror Heater)	82824-50170	
J 2	Junction Connector			Mirror Heater LH (w/o Mirror Heater)	90980-11587	
J 3	Junction Connector	90980-11583		Remote Control Mirror LH (w/ Mirror Heater)	82824-50170	
J 4	Junction Connector	90980-11915		Remote Control Mirror LH (w/o Mirror Heater)	90980-11587	
J 5	Junction Connector	90980-11661	M 2	Mirror Heater RH (w/ Mirror Heater)	82824-50170	
J 6	Junction Connector			Mirror Heater RH (w/o Mirror Heater)	90980-11587	
J 7	Junction Connector	90980-11529		Remote Control Mirror RH (w/ Mirror Heater)	82824-50170	
J 8	Junction Connector	90980-12346		Remote Control Mirror RH (w/o Mirror Heater)	90980-11587	
J 9	Junction Connector		90980-11661	M 3	Moon Roof Control Relay	90980-10799
J10	Junction Connector	90980-11542		Moon Roof Control SW		
J11	Junction Connector	90980-11661		M 4	Moon Roof Limit SW	90980-11011
J12	Junction Connector				Moon Roof Motor	
J13	Junction Connector	90980-12346	N 1	Noise Filter (1AZ-FE)	90980-11019	
J14	Junction Connector	82824-44050		Noise Filter (2AZ-FE)	90980-10843	
J15	Junction Connector	90980-11915	O 1	Oil Pressure SW	90980-11363	
J18	Junction Connector (LHD)	90980-11542	O 2	O/D Main SW	90980-10824	
	Junction Connector (RHD)	90980-11529	P 1	Power Steering Oil Pressure SW	90980-11428	
J19	Junction Connector	90980-12346	P 2	Pressure SW	90980-10943	
J20	Junction Connector	90980-11529	P 3	Parking Brake SW	90980-12340	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
P 4	Power Point Relay	82660-20340	R31	Radio and Player with Display	90980-11923
P 5	PTC Heater	90980-10956	R32	Radio and Player with Display	90980-12259
P 6	PTC Heater Amplifier	90980-10807	R33	Radio and Player with Display	90980-11533
P 7	Personal Light	82824-52040	S 1	Skid Control ECU with Actuator (w/ VSC)	90980-12297
P 8	Power Outlet	90980-10859		Skid Control ECU with Actuator (w/o VSC)	90980-12020
P 9	Power Window Control SW Rear LH	90980-11947	S 2	Speed Sensor Front LH	90980-11002
P10	Power Window Control SW Rear RH		S 3	Speed Sensor Front RH	
P11	Power Window Motor Front LH	90980-12344	S 4	Starter	90980-11400
P12	Power Window Motor Front RH		S 5	Starter (A/T)	90980-09506
P13	Power Window Motor Rear LH			Starter (M/T 1AZ-FE)	90980-09689
P14	Power Window Motor Rear RH			Starter (M/T 1CD-FTV)	90980-09507
P15	Pretensioner LH	90980-12253	S 6	Suction Control Valve No.1	90980-11285
P16	Pretensioner RH		S 7	Suction Control Valve No.2	90980-11284
R 1	Radiator Fan Motor	90980-10928	S 8	Seat Heater LH	90980-11296
R 2	Rear Washer Motor	90980-11250	S 9	Seat Heater RH	
R 3	Radar Sensor	90980-11013	S10	Seat Heater SW LH	90980-10797
R 4	Radio and Player with Display	90980-10819	S11	Seat Heater SW RH	90980-10996
R 5	Radio and Player with Display	90980-10803	S12	Short Connector	90980-10825
R 6	Radio and Player	90980-10997	S13	Short Connector	90980-10824
	Radio and Player with Display		S14	Short Connector	90980-12158
R 7	Radio and Player	90980-10996	S15	Short Connector	90980-11920
	Radio and Player with Display		S16	Short Connector	90980-12158
R 8	Rear Heater Blower Motor	90980-10795	S17	Short Connector	90980-11920
R 9	Rear Heater Relay	82660-20340	S18	Short Connector	90980-10825
R10	Rear Heater Relay (HI)		S19	Short Connector	90980-10824
R11	Rear Heater SW	90980-10797	S22	Short Connector	90980-12158
R12	Remote Control Mirror SW	90980-11657	S23	Short Connector	90980-11920
R13	Rear Blower Motor	90980-10916	S24	Short Connector	90980-12158
R14	Rear Combination Light LH	90980-10908	S25	Short Connector	90980-11920
R15	Rear Combination Light LH	90980-11399	S26	Short Connector	90980-10870
R16	Rear Combination Light RH	90980-10908	S27	Short Connector	90980-10871
R17	Rear Combination Light RH	90980-11399	S28	Short Connector	90980-10870
R18	Rear Cooler Relay	82660-37070	S29	Short Connector	90980-10871
R19	Rear Cooler Resistor	90980-10976	S30	Short Connector	90980-12158
R20	Rear Cooler SW		S31	Short Connector	90980-11920
R21	Rear Door Speaker LH	82824-52040	S32	Short Connector	90980-12172
R22	Rear Door Speaker RH		S33	Short Connector	90980-11922
R23	Rear Turn Signal Light LH	90980-10906	S34	Short Connector	90980-12172
R24	Rear Turn Signal Light RH		S35	Short Connector	90980-11922
R25	Rear Window Defogger	90980-12340	S36	Side Airbag Squib LH	90980-11864
R26	Rear Window Defogger		S37	Side Airbag Squib RH	90980-11854
R27	Rear Wiper Motor	90980-11296	S38	Stop Light SW	90980-11118
	Rear Wiper Relay		S39	Side Airbag Sensor LH	90980-11857
R28	Radio and Player with Display	90980-10997	S40	Side Airbag Sensor RH	
R29	Radio and Player with Display	90980-10996	S41	Speed Sensor Rear LH	90980-11060
R30	Radio and Player with Display	90980-11909			

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
S42	Speed Sensor Rear RH	90980-10859			
S43	Short Connector	90980-10870			
S44	Short Connector	90980-10871			
S45	Short Connector	90980-11920			
S46	Short Connector	90980-12158			
S47	Short Connector	90980-11922			
S48	Short Connector	90980-11923			
S49	Short Connector	90980-10870			
S50	Short Connector	90980-10871			
S51	Short Connector	90980-10870			
S52	Short Connector	90980-10871			
S53	Steering Sensor	82824-45030			
T 2	Throttle Position SW	90980-11038			
T 3	Turbine Speed Sensor	90980-11156			
T 4	Turbo Pressure Sensor	90980-10845			
T 5	Theft Deterrent ECU	90980-11392			
T 6	Theft Deterrent ECU	90980-11424			
T 8	Transponder Key Computer	90980-12173			
T 9	Turn Signal Flasher Relay	90980-10799			
T10	TVSS ECU	90980-11971			
T11	Theft Deterrent Siren (LHD)	90980-10988			
	Theft Deterrent Siren (RHD)	90980-10942			
T12	Tweeter LH	90980-10915			
T13	Tweeter RH				
T14	Throttle Control Motor	90980-11858			
	Throttle Position Sensor				
T15	Television Camera ECU	90980-12169			
T16	Television Camera ECU	90980-10997			
T17	TRC OFF SW	90980-10933			
T18	Television Camera	90980-12211			
U 1	Unlock Warning SW	90980-10860			
V 1	VRV (EGR)	90980-11162			
V 2	VSV (EVAP)	90980-11156			
V 3	VSV (Turbo Pressure Sensor)	90980-11149			
V 4	Vanity Light LH	90980-10621			
V 5	Vanity Light RH				
V 6	VSC Warning Buzzer	90980-10906			
W 1	Water Temp. Sensor (Except 1CD-FTV)	90980-10735			
	Water Temp. Sensor (1CD-FTV)	90980-10737			
W 2	Water Temp. SW	90980-11235			
W 3	Wireless Door Lock Control Receiver	90980-11909			
Y 1	Yaw Rate Sensor	90980-11904			

Note: Not all of the above part numbers of the connector are established for the supply.

