

■ LIGHT REMINDER SYSTEM

This system is standard equipment on the model for Europe.

When the ignition key is turned from the ON or ACC to LOCK position while the driver's door open with the taillights or headlights turned on, this system warns the driver that the lights remain on by sounding the buzzer. The buzzer is located inside the combination meter.