


ACCESSORIES

■ POWER WINDOW SYSTEM

1. General


The control of this system is effected by the power window master switch.

This system establishes communication between the power window master switch and the power window switches of the individual doors. It effects control through the ECU that is built into the master switch, which determines the conditions of the switches.

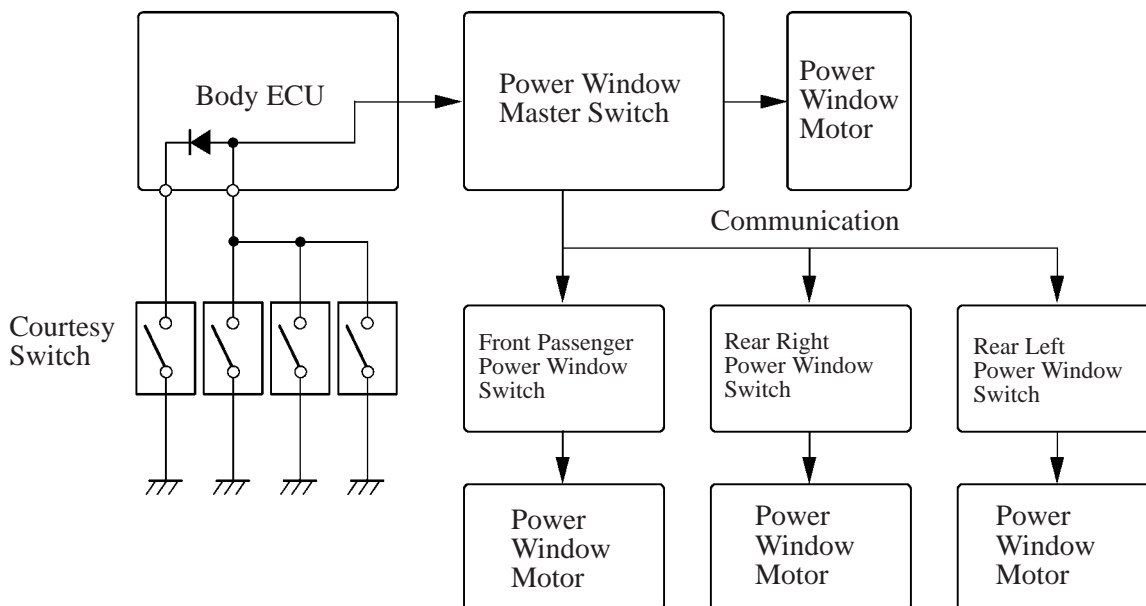

206BE20

2. Layout of Component

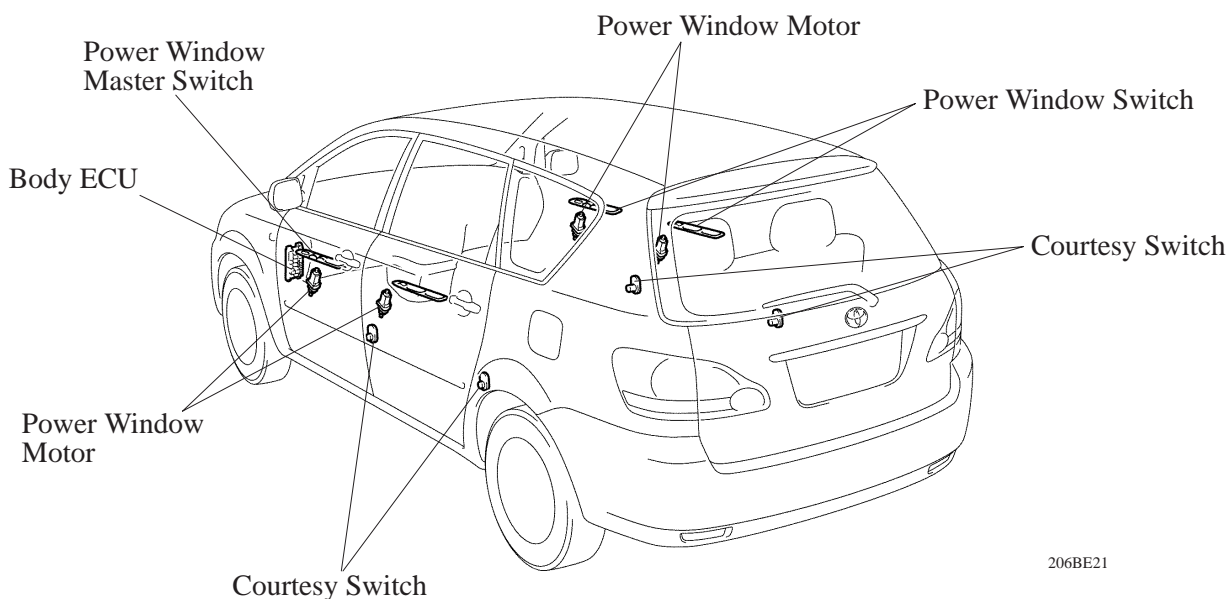

206BE21

3. Function

The power window system has the following functions.

Function	Outline
All-door one-touch auto up-and-down Function	The “all-door one-touch auto up-and-down” function enables the window of any door to be fully opened or closed at a touch of the all power window switches.
Remote Control Function	The up and down operations of the front passenger window and the rear windows can be controlled by operating the power window master switch.
Key-off Operation Function	The door key-off operation function makes it possible to operate the power window for approximately 43 seconds after the ignition switch is turned to the ACC or LOCK position, if the any door is not opened.
Jam Protection Function	A “jam protection” function automatically stops the power window and moves it downward if a foreign object gets jammed in the window during one-touch auto-up operation.