


OVERDRIVE SWITCH


The overdrive switch has been changed from the previous ON/OFF lock type to the momentary type switch. Pressing the momentary switch closes (turns ON) the contact points, and releasing the switch opens (turns OFF) the contact points. Accordingly, pressing the switch causes the signal to be input into the engine & ECT ECU.

Pressing the switch in overdrive turns OFF the overdrive. Pressing it again turns the overdrive back ON. When the overdrive is OFF, turning the ignition switch from OFF to ON turns the overdrive back ON.

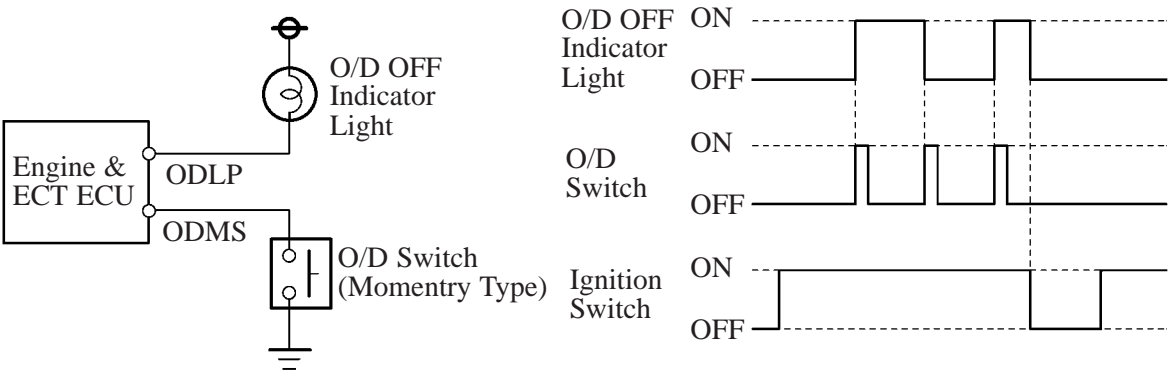

New

172GN01

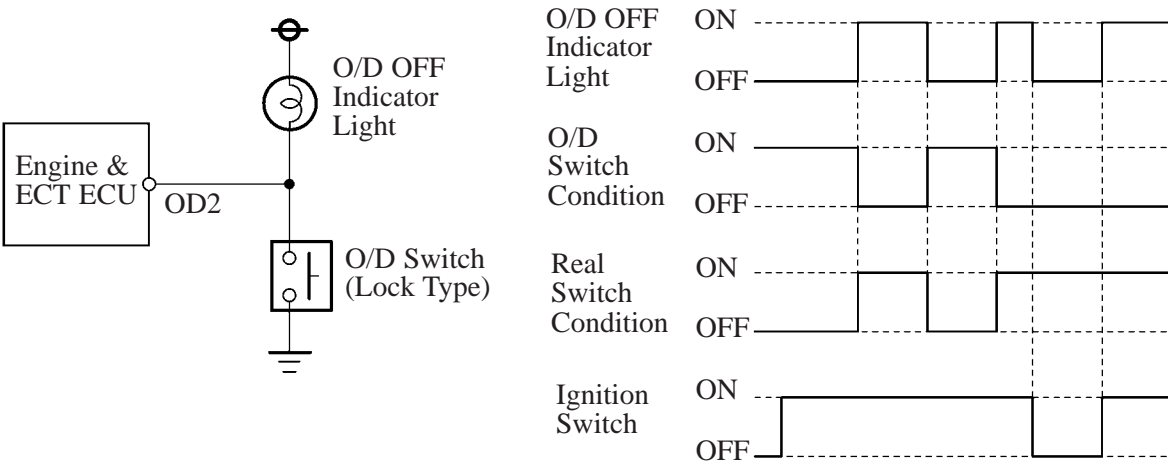

Previous

172GN02