

2. Cooling System

Super Long Life Coolant

The TOYOTA genuine Super Long Life Coolant (SLLC) has been adopted. As a result, the maintenance interval has been extended.

► Specifications ◀

Model			New	Previous
Engine Coolant	Capacity liters (US qts, Imp.qts)	with front heater	6.8 (7.2, 6.0)	←
		with front & rear heater	7.5 (7.9, 6.6)	
		without heater	5.9 (6.2, 5.2)	
	Type		TOYOTA Genuine SLLC	TOYOTA Genuine LLC
	Color		Pink	Red
	Maintenance Intervals for Europe	First time	160,000 km (100,000 mile)	60,000 km (37,500 mile)
		Subsequent	Every 80,000 km (50,000 mile)	Every 30,000 km (18,000 mile)
	Maintenance Interval for General Countries	Replace at first time	160,000 km (100,000 mile)	Replace Every 40,000 km (25,000 mile) or 24 months Whichever comes first.
		Replace at first time subsequent	Every 80,000 km (50,000 mile)	
Thermostat	Operating Temperature °C (°F)		80 – 84 (176 – 183)	←

- SLLC is pre-mixed (50% coolant and 50% distilled water), so no dilution is needed when adding or replacing SLLC in the vehicle.
- If LLC is mixed with LLC, the interval for LLC (every 30,000 km (18,000 mile) for Europe model/40,000 km (25,000 mile) or 24 months whichever comes first for General Countries model) should be used.
- You can also apply the new maintenance interval (every 30,000 km (18,000 mile) for Europe model/40,000 km (25,000 mile) or 24 months whichever comes first for General Countries model) to vehicle initially filled with LLC (red-colored), if you use SLLC (pink-colored) for the coolant change.