

PROBLEM SYMPTOMS TABLE

When the malfunction is not confirmed in the diagnostic trouble code check and the problem still cannot be confirmed in the basic inspection, use this table and troubleshoot according to the priority order given below.

Symptom	Suspect Area	See Page
Engine does not crank (Does not start)	1. Starter signal circuit 2. Starter 3. ST relay	05-414 19-1 19-1
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. ECM	05-399 05-404 10-30
No complete combustion (Does not start)	1. Fuel pump control circuit	05-404
Engine cranks normally but difficult to start	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	05-414 05-404 14-1
Difficult to start with cold engine	1. Starter signal circuit 2. Fuel pump control circuit	05-414 05-404
Difficult to start with hot engine	1. Starter signal circuit 2. Fuel pump control circuit	05-414 05-404
High engine idling speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	05-949 05-399
Low engine idling speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	05-949 05-404
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	14-1 05-404
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	05-399 05-404
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	05-404 05-766
Surging (Poor driveability)	1. Fuel pump control circuit	05-404
Engine stalls soon after starting	1. Fuel pump control circuit	05-404
Engine stalls during A/C operation	1. A/C signal circuit (Compressor circuit) 2. ECM	05-949 10-30