

DTC	P1602	INTERIOR IC MALFUNCTION
-----	-------	-------------------------

## CIRCUIT DESCRIPTION

The ECM monitors the battery condition. If the battery voltage drops below its standard level during the engine running (excluding cranking), the ECM interprets this as battery deterioration, and will set the DTC.

DTC No.	DTC Detection Condition	Trouble Area
P1602	Excluding cranking, the battery voltage is below 12 V for more than 10 seconds during the engine running (1 trip detection logic)	• Battery

## INSPECTION PROCEDURE

1	INSPECT BATTERY
---	-----------------

NG

REPLACE BATTERY

OK

CHECK CHARGING SYSTEM (See page 19-14)
--