



# LOCATION

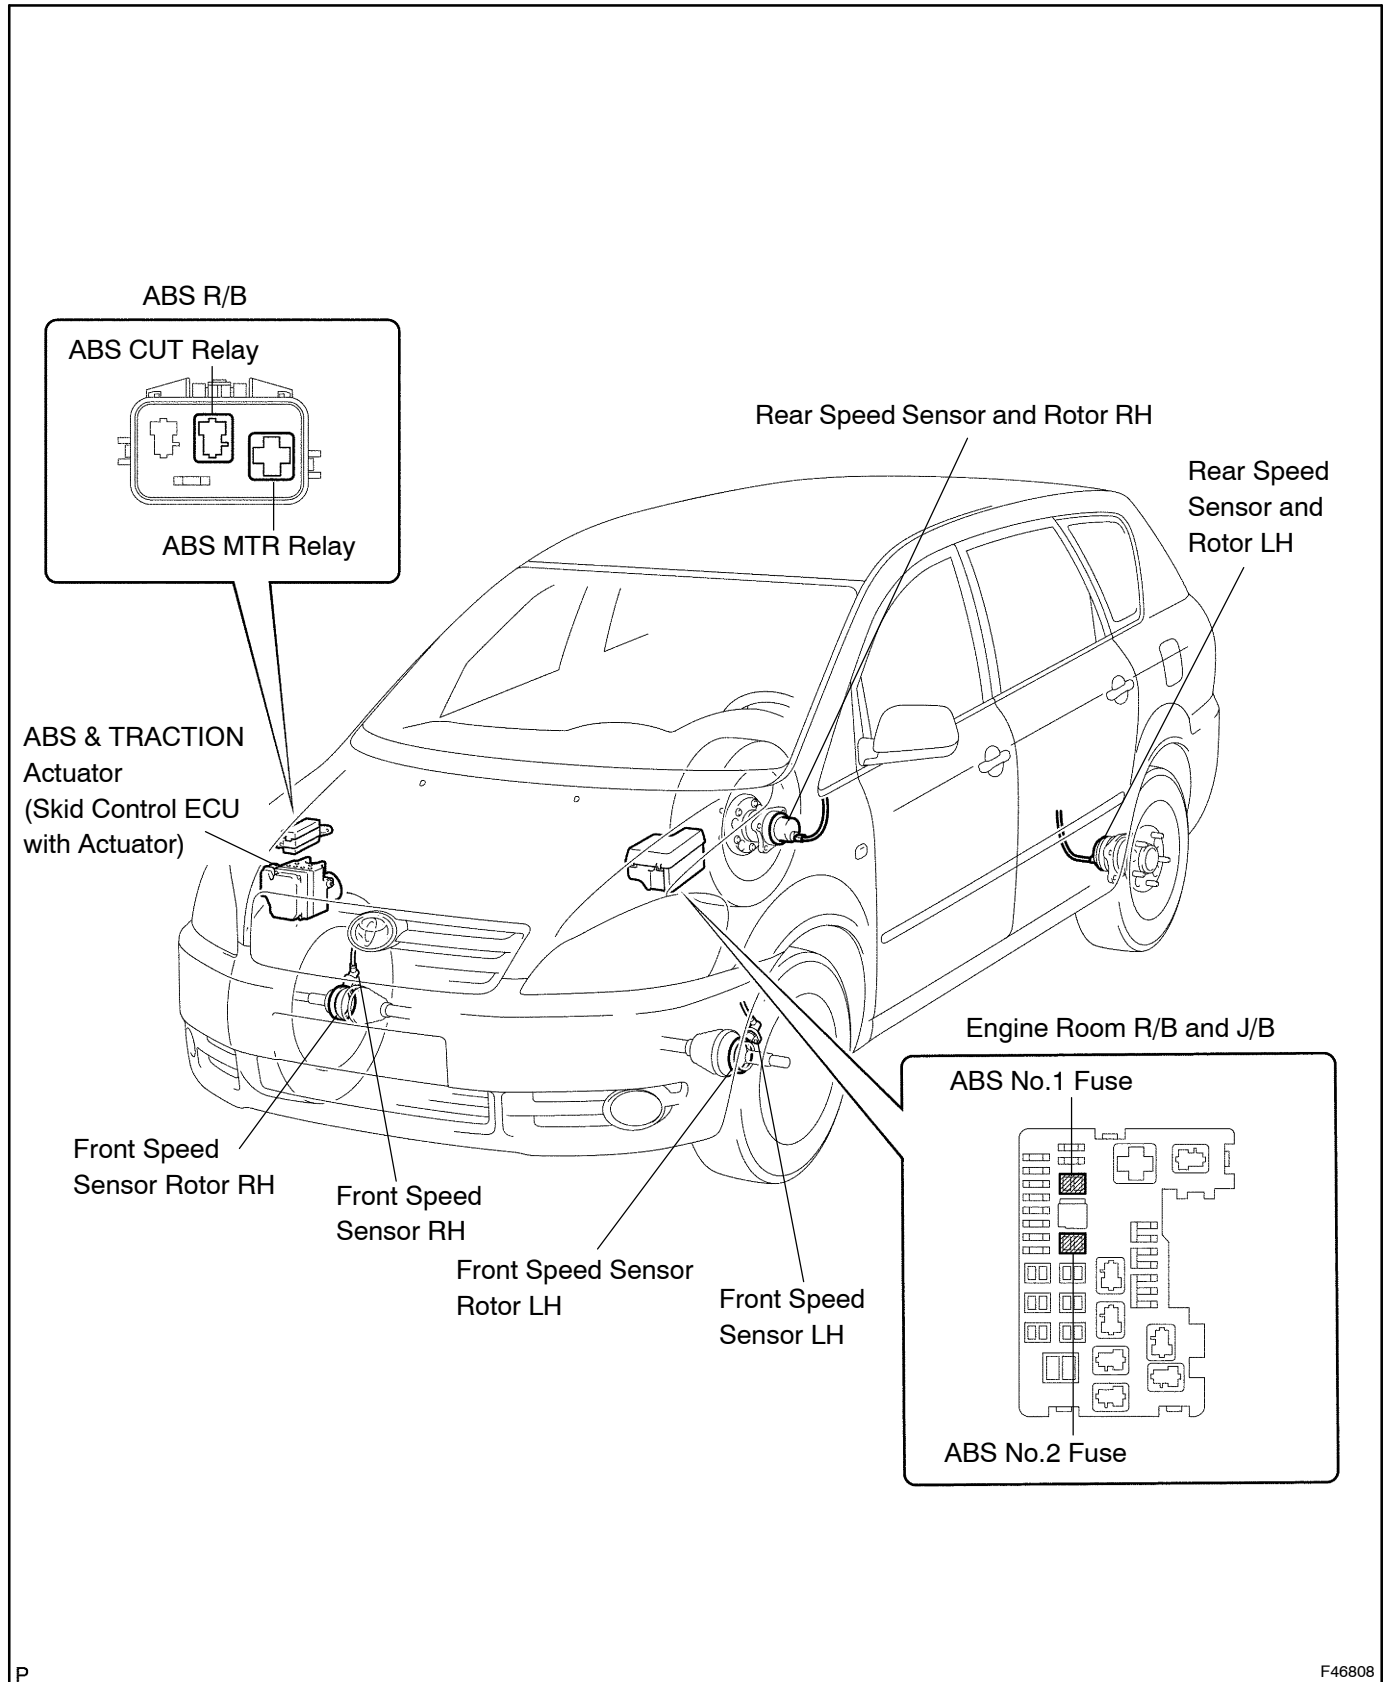

**LHD Models:**

Instrument Panel J/B

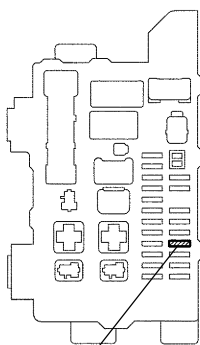

ECU-IG Fuse

Combination Meter Assy

- ABS Warning Lamp
- Brake Warning Lamp
- VSC Warning Lamp
- TRC OFF Indicator Lamp
- Slip Indicator Lamp

Skid Control Buzzer

Steering Angle Sensor

ECM

DLC 3


Stop Lamp Switch

TRC OFF Switch

Parking Brake Switch

Yaw Rate Sensor  
(Deceleration Sensor)**RHD Models:**

Instrument Panel J/B

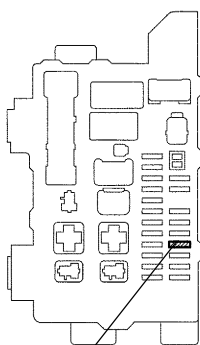

ECU-IG Fuse

ECM

Steering Angle Sensor

Combination Meter Assy

- ABS Warning Lamp
- Brake Warning Lamp
- VSC Warning Lamp
- TRC OFF Indicator Lamp
- Slip Indicator Lamp

Skid Control Buzzer

TRC OFF Switch

DLC 3

Parking Brake Switch

Yaw Rate Sensor  
(Deceleration Sensor)

Stop Lamp Switch