


DTC CHECK/CLEAR

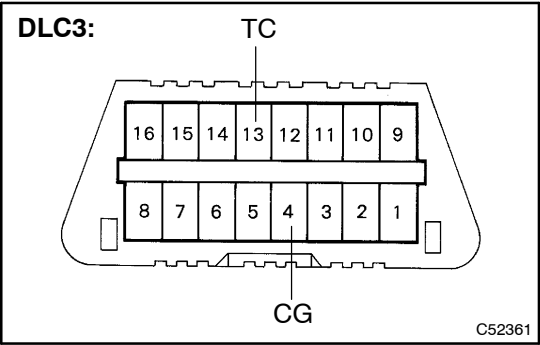


1. DTC CHECK (USING SST CHECK WIRE)

- (a) Check DTCs.
- (1) Using SST, connect terminals TC and CG of the DLC3.
- SST 09843-18040
- (2) Turn the ignition switch to the ON position.
- (3) Read the DTC from the ABS warning lamp and VSC warning lamp on the combination meter.

HINT:


- If no code appears, inspect the diagnostic circuit, ABS warning light circuit and VSC warning light circuit.

Trouble Area	See page
TC and CG terminal circuit	05-734
ABS warning light circuit	05-696
VSC warning light circuit	05-705

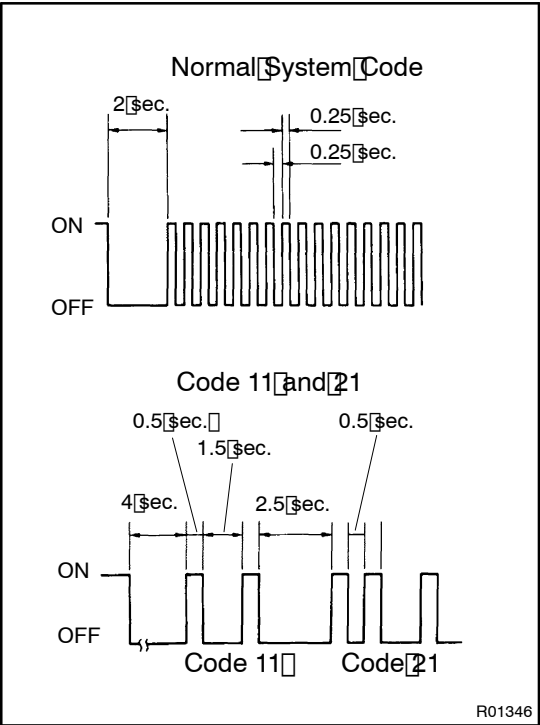

- As an example, the blinking patterns for a normal system code and trouble codes 11 and 21 are shown on the left.
- (4) Codes are explained in the code table on page 05-625.
- (5) After completing the check, disconnect terminals TC and CG of the DLC3, and turn off the display.

If 2 or more DTCs are detected at the same time, the DTCs will be displayed in assenting order.

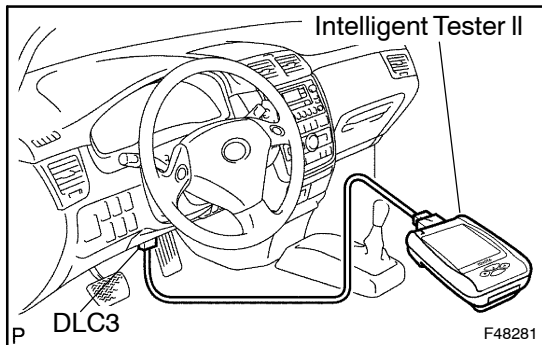


## 2. DTC CHECK (USING INTELLIGENT TESTER II)

### (a) Check DTCs.

- (1) Connect the intelligent tester II to the DLC3.
- (2) Turn the ignition switch to the ON position.
- (3) Read the DTCs following the prompts on the tester screen.

#### HINT:

Refer to the intelligent tester II operator's manual for further details.

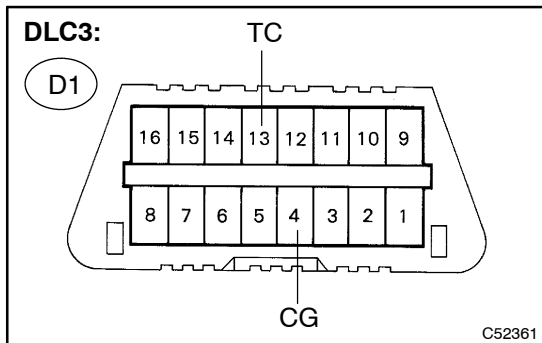


## 3. CLEAR DTC (USING SST CHECK WIRE)

### (a) Clear the DTCs.

- (1) Using SST, connect terminals TC and CG of the DLC3.

SST 09843-18040

- (2) Turn the ignition switch to the ON position.

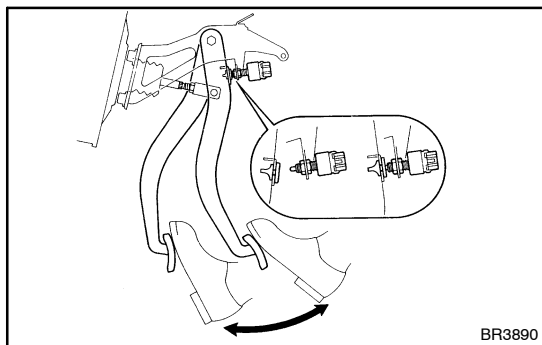


- (3) Clear the DTCs stored in the ECU by depressing the brake pedal 8 times or more within 5 seconds.

- (4) Check that the warning lamp indicates a normal system code.

- (5) Remove the SST.

#### HINT:

Clearing the DTCs cannot be performed by removing the battery cable or the ECU-IG fuse

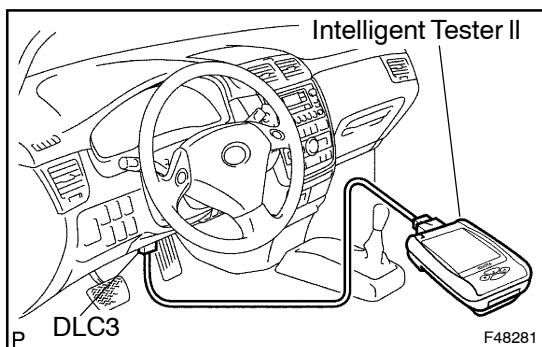

## 4. CLEAR DTC (USING INTELLIGENT TESTER II)

### (a) Clear the DTCs.

- (1) Connect the intelligent tester II to the DLC3.
- (2) Turn the ignition switch to the ON position.
- (3) Operate the intelligent tester II to clear the codes.

#### HINT:

Refer to the intelligent tester II operator's manual for further details.

## 5. END OF DTC CHECK/CLEAR

- (a) Turn the ignition switch to the ON position
- (b) Check that the ABS warning lamp and VSC warning lamp go off within approximately 3 seconds.