

DTC	P0982/65	SHIFT SOLENOID "D" CONTROL CIRCUIT LOW (SHIFT SOLENOID VALVE S4)
DTC	P0983/65	SHIFT SOLENOID "D" CONTROL CIRCUIT HIGH (SHIFT SOLENOID VALVE S4)

CIRCUIT DESCRIPTION


Shifting from 1st to O/D is performed in combination with "ON" and "OFF" operation of the shift solenoid valves S1 and S2 which is controlled by the ECM. If an open or short circuit occurs in either of the shift solenoid valves, the ECM controls the remaining normal shift solenoid valve to allow the vehicle to be operated smoothly (Fail safe function).

DTC No.	DTC Detection Condition	Trouble Area
P0982/65	ECM detects short in solenoid valve S4 circuit 2 times when solenoid valve S4 is operated (1-trip detection logic)	<ul style="list-style-type: none"> • Short in shift solenoid valve S4 circuit • Shift solenoid valve S4 • ECM
P0983/65	ECM detects open in solenoid valve S4 circuit 2 times when solenoid valve S4 is not operated (1-trip detection logic)	<ul style="list-style-type: none"> • Open in shift solenoid valve S4 circuit • Shift solenoid valve S4 • ECM

MONITOR DESCRIPTION


The ECM commands gear shifts by turning the shift solenoid valves "ON/OFF". When there is an open or short circuit in any shift solenoid valve circuit, the ECM detects the problem and illuminates the MIL and stores the DTC. And the ECM performs the fail-safe function and turns the other shift solenoid valves in good condition "ON/OFF" (In case of an open or short circuit, the ECM stops sending current to the circuit.) (see page 05-778).

WIRING DIAGRAM

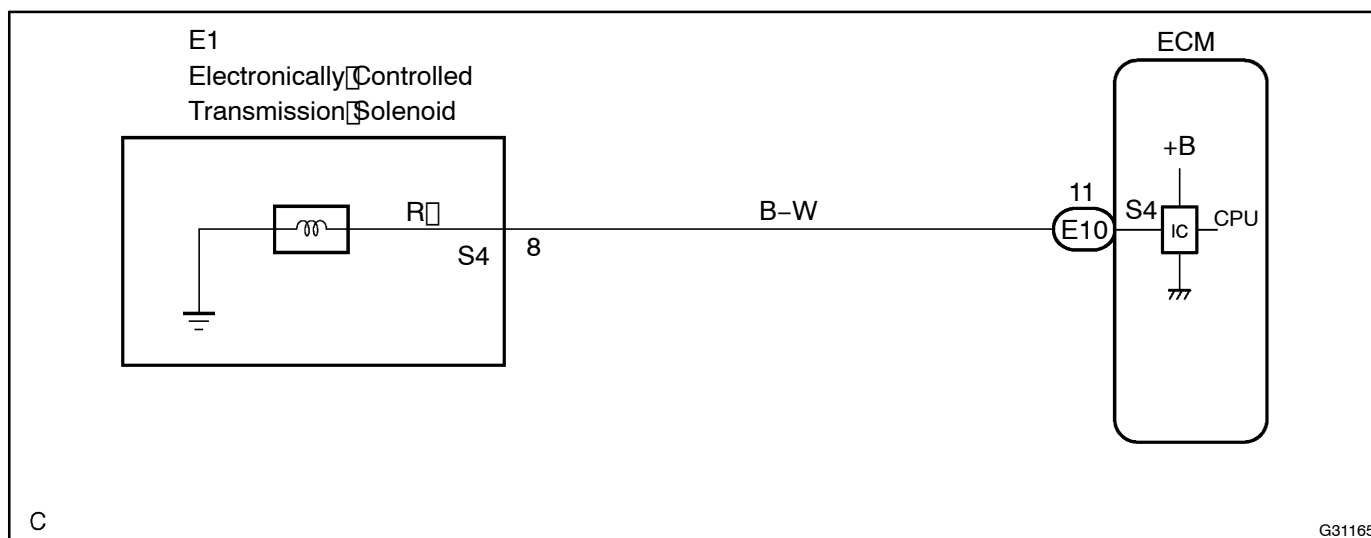

INSPECTION PROCEDURE

1 INSPECT TRANSMISSION WIRE(S4)

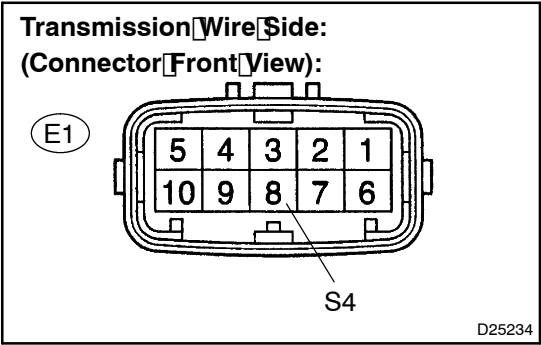

- (a) Disconnect the transmission wire connector from the transaxle.
- (b) Measure the resistance according to the value(s) in the table below.


Standard:

Tester Connection	Specified Condition 20°C (68°F)
8 - Body ground	11 to 5Ω

NG Go to step 3

OK

2 CHECK HARNESS AND CONNECTOR (TRANSMISSION WIRE - ECM)

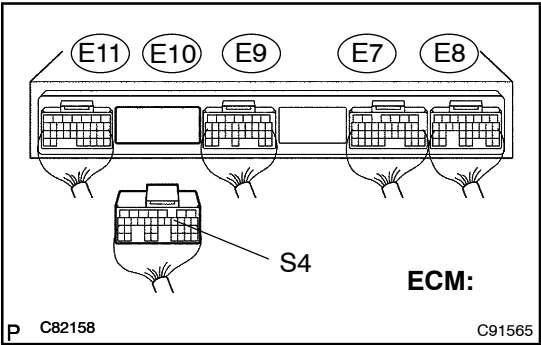

- (a) Connect the transmission connector to the transaxle.
- (b) Disconnect the connector from the ECM.
- (c) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Specified Condition 20°C (68°F)
E10 - 1 (S4) - Body ground	11 to 5Ω


NG REPAIR OR REPLACE HARNESS OR CONNECTOR (SEE PAGE 01-32)

OK

REPLACE ECM (SEE PAGE 10-30)

3 INSPECT SHIFT SOLENOID VALVE(S4)

Shift Solenoid Valve S4:

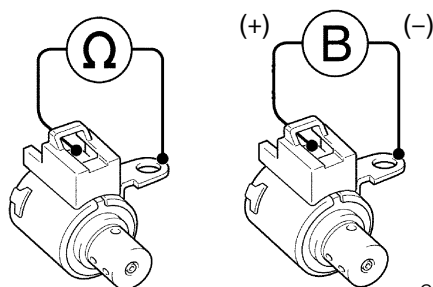

G28386

- (a) Remove the shift solenoid valve S4.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Specified Condition 20 °C (68 °F)
Solenoid Connector (S4) – Solenoid Body (S4)	11 to 15 Ω

- (c) Connect positive (+) lead to the terminal of solenoid connector, negative (–) lead to the solenoid body.

OK:

The solenoid makes an operating noise.

NG

REPLACE SHIFT SOLENOID VALVE(S4)

OK

REPAIR OR REPLACE TRANSMISSION WIRE (See Pub. No. RM864E, page 40-23)