

SUPPLEMENTAL RESTRAINT SYSTEM

05K9P-01

HOW TO PROCEED WITH TROUBLESHOOTING

The Intelligent Tester II can be used at steps 4, 6, 8 and 9.

1	VEHICLE BROUGHT TO WORKSHOP
---	-----------------------------



 
2	CUSTOMER PROBLEM ANALYSIS (SEE PUB. NO. RM864E, PAGE 05-400)
---	--




3	WARNING LIGHT CHECK (SEE PUB. NO. RM864E, PAGE 05-401)
---	--



4	DTCs CHECK (Present and Past DTCs) (SEE PUB. NO. RM864E, PAGE 05-401)
---	---



 DTCs ARE OUTPUT (INCLUDING NORMAL SYSTEM CODE): GO TO STEP 5



DTCs ARE NOT OUTPUT: PROBLEM SYMPTOMS TABLE (SEE PUB. NO. RM864E, PAGE 05-413)

5	DTCs CHART (SEE PAGE 05-975)
---	------------------------------



6	CIRCUIT INSPECTION (SEE PAGE 05-981 TO 05-996) (SEE PUB. NO. RM864E, PAGE 05-430 TO 05-537)
---	---



7	REPAIR
---	--------



8	CLEAR THE DTCs (Present and Past DTCs) (SEE PUB. NO. RM864E, PAGE 05-401)
---	---



9	DTCs CHECK (Present and Past DTCs) (SEE PUB. NO. RM864E, PAGE 05-401)
---	---

 DTCs ARE NOT OUTPUT: GO TO STEP 10

 DTCs ARE OUTPUT: GO TO STEP 5

10	SYMPTOM SIMULATION (SEE PUB. NO. RM864E, PAGE 01-20)
----	--

 WARNING LIGHT REMAINS OFF: GO TO STEP 11

 WARNING LIGHT IS ON: GO TO STEP 5

11	CONFIRMATION TEST
----	-------------------



END
-----