


TERMINALS OF ECU

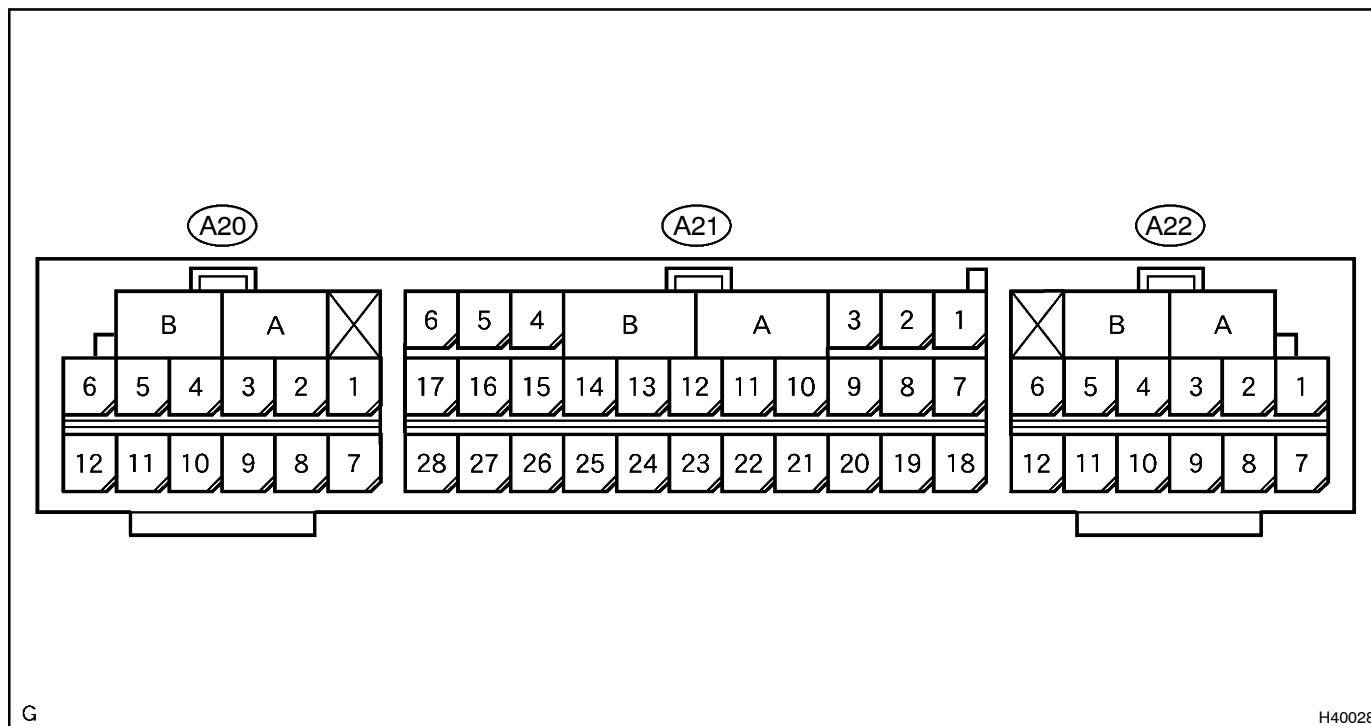

No.	Symbol	Destination
A	-	(Electrical Connector Check Mechanism)
B	-	(Electrical Connector Check Mechanism)
A21-3	LA	Combination Meter Assy (SRS Warning Light)
A21-5	IG2	IGN Fuse
A21-9	+SR	Airbag Front RH Sensor
A21-10	P+	Instrument Panel Passenger Airbag Assy (P Squib)
A21-11	P-	Instrument Panel Passenger Airbag Assy (P Squib)
A21-12	SIL	DLC3
A21-13	D-	Horn Button Assy (D Squib)
A21-14	D+	Horn Button Assy (D Squib)
A21-15	+SL	Airbag Sensor Front LH
A21-19	TC	DLC3
A21-20	-SR	Airbag Front RH Sensor
A21-23	GSW2	ECM
A21-26	-SL	Airbag Sensor Front LH
A21-27	E1	Ground
A21-28	E2	Ground
A20-1	PL-	Front Seat Outer Belt Assy LH (P/T Squib LH)
A20-2	PL+	Front Seat Outer Belt Assy LH (P/T Squib LH)
A20-3	ICL+	Curtain Shield Airbag Assy LH (Curtain Shield Squib LH)
A20-4	ICL-	Curtain Shield Airbag Assy LH (Curtain Shield Squib LH)
A20-5	SFL-	Front Seat Airbag Assy LH (Side Squib LH)
A20-6	SFL+	Front Seat Airbag Assy LH (Side Squib LH)
A20-7	VUPL	Side Airbag Sensor Assy LH
A20-9	ESL	Side Airbag Sensor Assy LH
A20-10	SSL+	Side Airbag Sensor Assy LH
A20-12	SSL-	Side Airbag Sensor Assy LH
A22-1	SFR+	Front Seat Airbag Assy RH (Side Squib RH)
A22-2	SFR-	Front Seat Airbag Assy RH (Side Squib RH)

DIAGNOSTICS - SUPPLEMENTAL RESTRAINT SYSTEM

No.	Symbol	Destination
A22-3	ICR-	Curtain Shield Airbag Assy RH (Curtain Shield Squib RH)
A22-4	ICR+	Curtain Shield Airbag Assy RH (Curtain Shield Squib RH)
A22-5	PR+	Front Seat Outer Belt Assy RH (P/T Squib RH)
A22-6	PR-	Front Seat Outer Belt Assy RH (P/T Squib RH)
A22-7	SSR-	Side Airbag Sensor Assy RH
A22-9	SSR+	Side Airbag Sensor Assy RH
A22-10	ESR	Side Airbag Sensor Assy RH
A22-12	VUPR	Side Airbag Sensor Assy RH