

CHECK MODE PROCEDURE

1. USING INTELLIGENT TESTER II: CHECK MODE (SIGNAL CHECK)

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch to the ON position.
- (c) Select the "SIGNAL CHECK", and proceed checking with the intelligent tester II.

HINT:

- Malfunctions can be detected in the check mode better than the normal check mode.
- If the normal system code is output in the normal check mode even when a sensor signal malfunction is suspected, perform the inspection in the check mode.