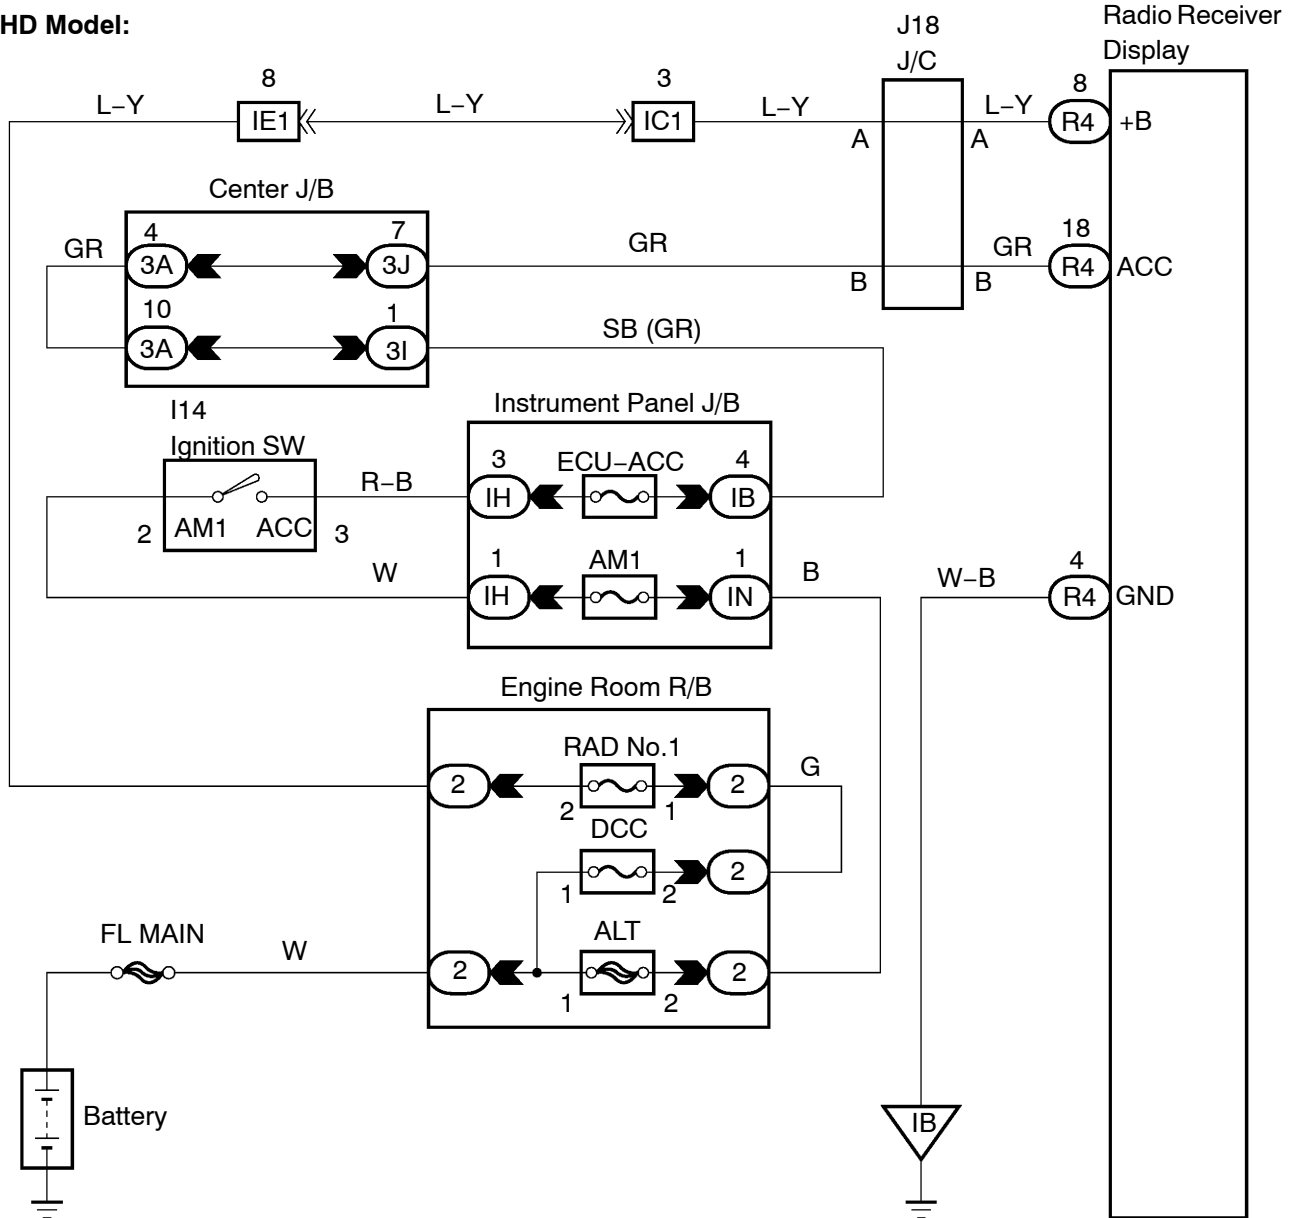



RHD Model:

C

I40751

INSPECTION PROCEDURE

1 INSPECT DISPLAY(+B,ACC,GND)

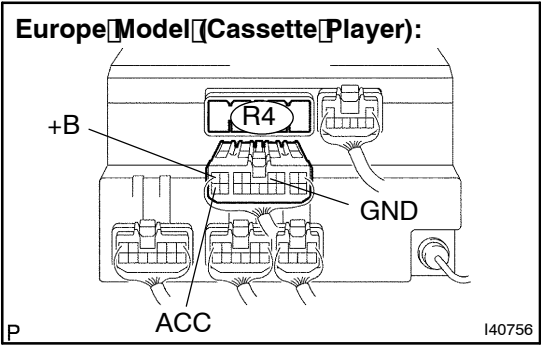

- (a) Disconnect the connector from the display.
- (b) Measure the resistance according to the value in the table below.


Standard:

Tester connection	Condition	Specified condition
GND - Body ground	Always	Below 1 Ω

- (c) Measure the voltage according to the values in the table below.

Standard:

Tester connection	Condition	Specified condition
+B - GND	Always	10 to 14 V
ACC - GND	Ignition SW ACC	10 to 14 V

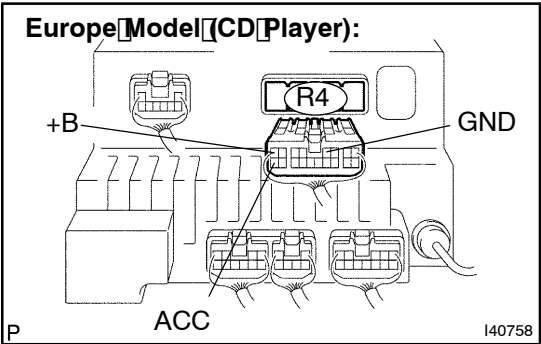

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1024)