



# FUEL EFFICIENCY IS NOT DISPLAYED

## WIRING DIAGRAM

### LHD Model:

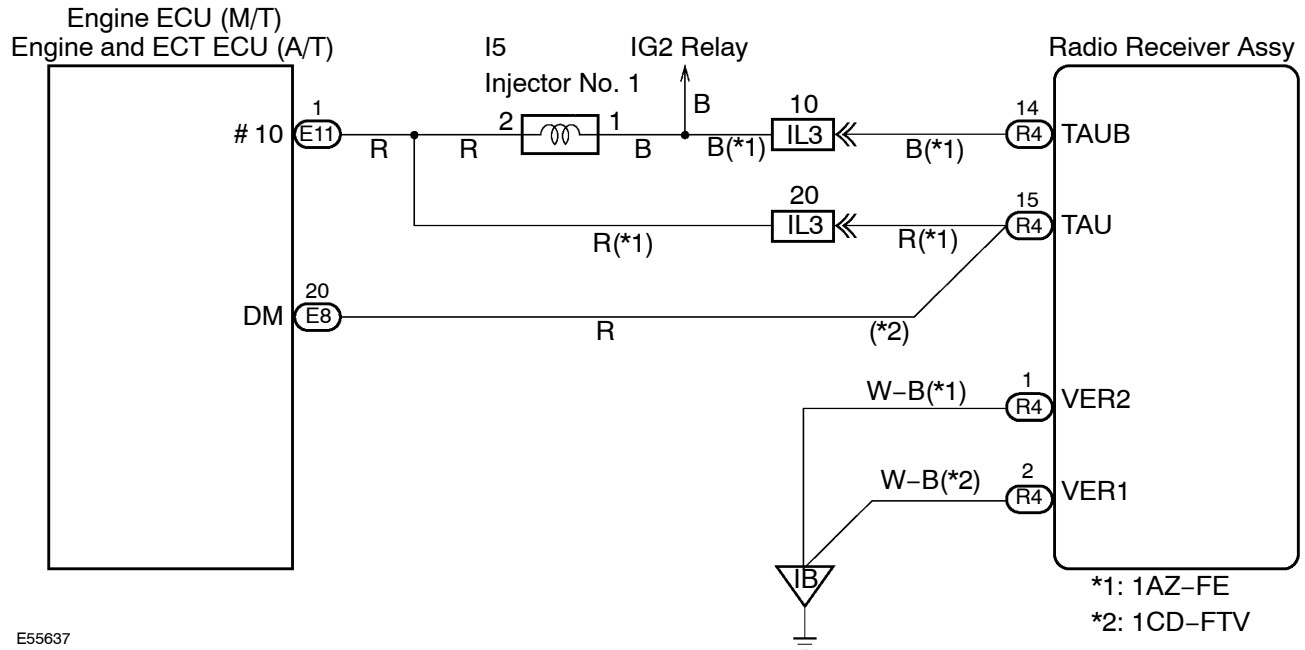


### RHD Model:

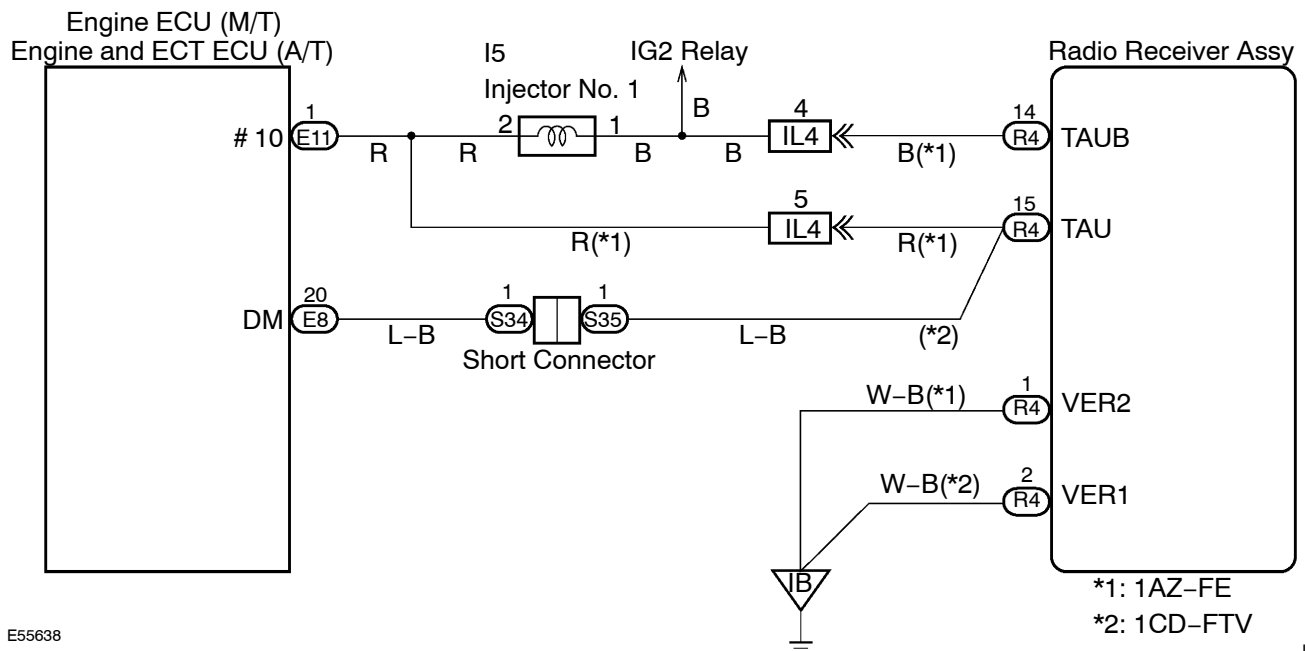

INSPECTION PROCEDURE


1 CHECK HARNESS AND CONNECTOR (RADIO RECEIVER ASSY - ECM)

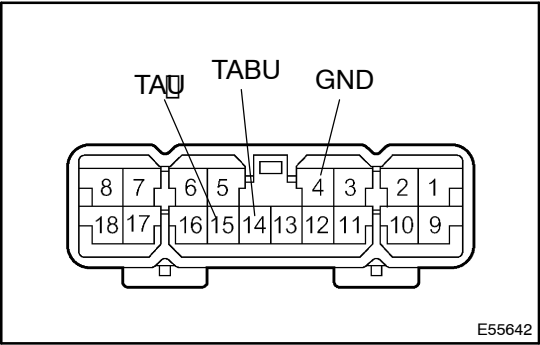

(a) Measure the voltage according to the conditions in the table below.

Standard:

Tester Connection	Condition	Specified Condition
TAUB - GND	Ignition switch ON	10 to 14 V
TA - GND	Engine idling	Correct waveform as shown

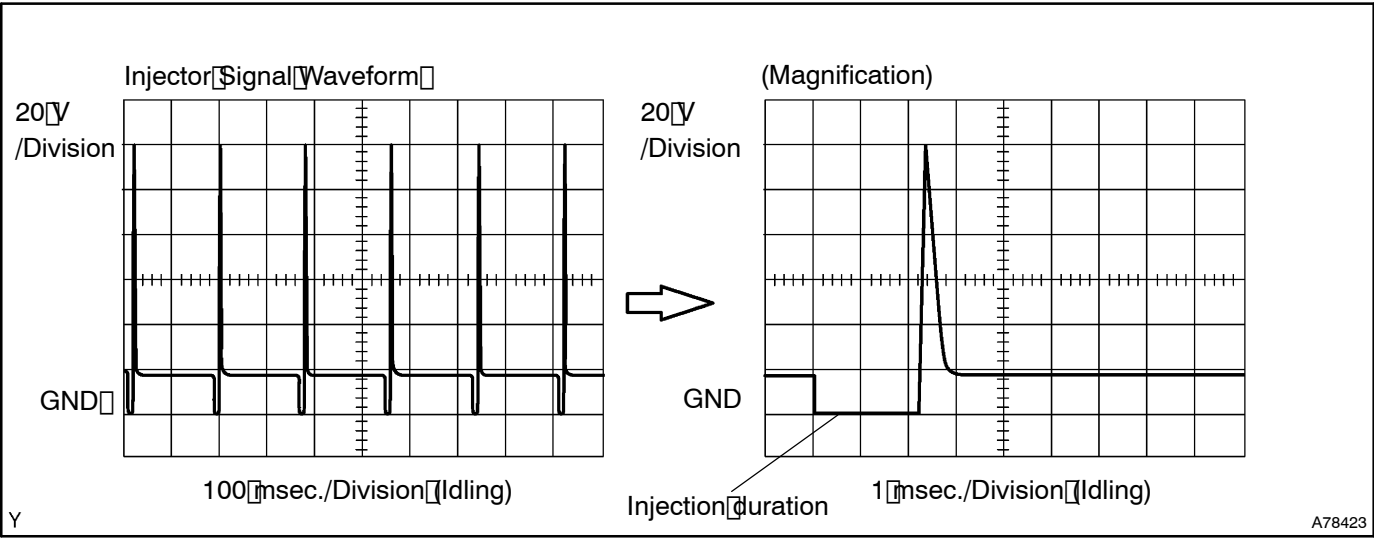

NG GO TO SFI SYSTEM (SEE PAGE 05-3 OR 05-436)

OK

CHECK AND REPLACE RADIO RECEIVER ASSY