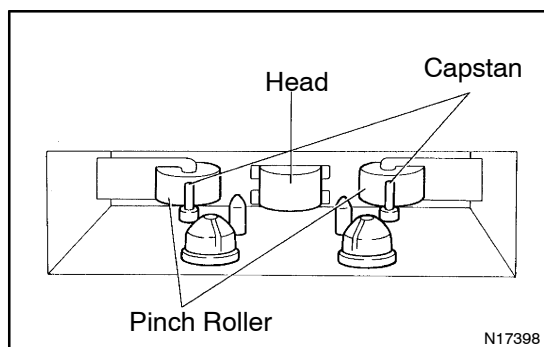


SOUND QUALITY IS BAD ONLY WHEN PLAYING TAPE**INSPECTION PROCEDURE****1 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK**

- (a) Replace the cassette tape with another and recheck.
- (1) Replace the cassette tape with another normal one to see if the same trouble occurs again.
- OK: Malfunction disappears.**

OK**CASSETTE TAPE IS FAULTY****NG****2 CHECK FOR ANY FOREIGN OBJECT**

- (a) Check for foreign objects.
- (1) Check that no foreign objects or defects are detected in the cassette tape player.
- OK: No foreign objects or defects are detected.**

NG**REMOVE FOREIGN OBJECT****OK****3 CLEAN HEAD AND CHECK OPERATION**

- (a) Head cleaning
- (1) Raise the cassette door with your finger. Using a pencil or similar object, push in the guide.
- (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
- (3) Check if the same trouble occurs again.
- OK: Malfunction disappears.**

NG**REPLACE RADIO RECEIVER ASSY
(SEE PUB. NO. RM864E, PAGE 67-2)****OK****HEAD IS DIRTY**