


## DISPLAY CHECK MODE (TOUCH SWITCH CHECK)


### HINT:

- This mode checks the touch switch operation condition on the radio and navigation assy.
- Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.


1. Enter **Diagnostic Mode** (see [page 05-1087](#)).

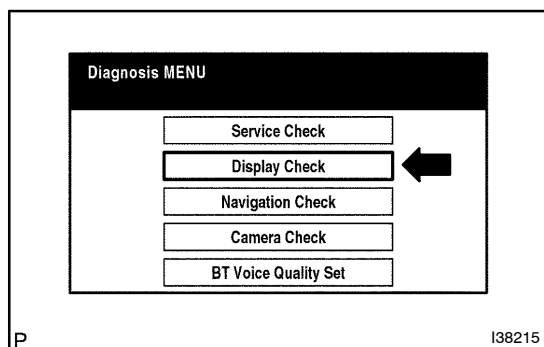

2. Select **"Display Check"** from the **"Diagnosis MENU"** screen.

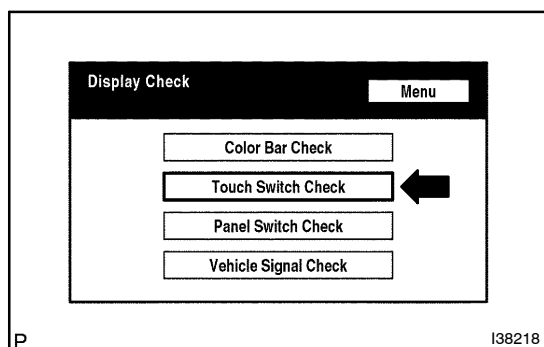

3. Select **"Touch Switch Check"** from the **"Display Check"** screen.

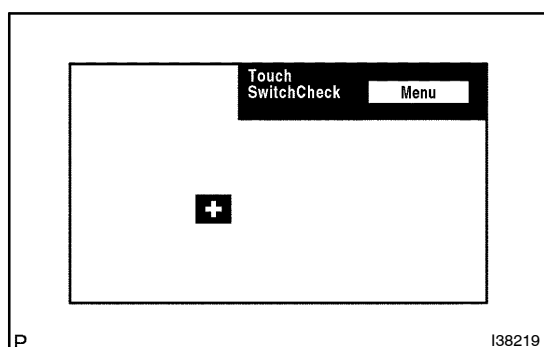

4. Touch the display anywhere in the open area to perform the check when the **"Touch Switch Check"** screen is displayed.

### HINT:

- A "+" mark is displayed where the display is touched.
- The "+" mark remains on the display even after the finger is removed.