


DISPLAY DOES NOT DIM (NIGHT SCREEN) WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1 CHECK IMAGE QUALITY SETTING

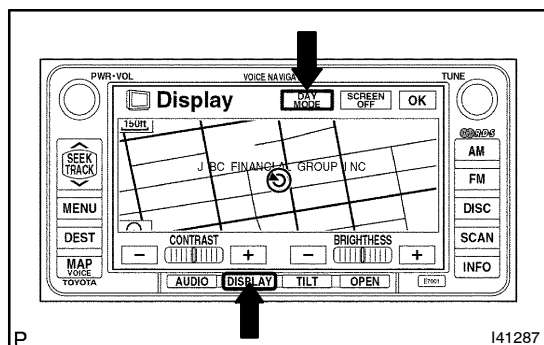

P

I41287

- Enter the display adjustment screen by pressing the "DISPLAY" switch.
- Turn the light control switch to the TAIL position.
- Check if "DAY MODE" on the display adjustment is ON.
OK: "DAY MODE" is ON.


OK

TURN FORCED "DAY MODE" SETTING OFF

NG

2 DISPLAY CHECK MODE (VEHICLE SIGNAL CHECK MODE)

- Enter the "Display Check" mode (Vehicle Signal Check Mode) (see page 05-1102).

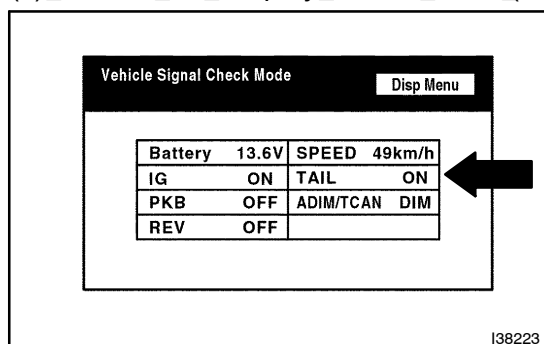

I38223

- Turn the light control switch to the TAIL, HEAD or OFF position.

Standard:

Light control switch	Display
TAIL or HEAD	ON
OFF	OFF

HINT:

The display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK

REPLACE RADIO AND NAVIGATION ASSY
(SEE PAGE 67-1)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1094)