

PANEL SWITCH DOES NOT FUNCTION

INSPECTION PROCEDURE

1 CHECK THE PANEL SWITCH


- (a) Check for foreign matter around the switch that might prevent operation.
OK: No foreign matter is found.

NG REMOVE ANY FOREIGN MATTER FOUND

OK

2 DISPLAY CHECK MODE (PANEL SWITCH CHECK MODE)

- (a) Enter the "Display Check" mode (Panel Switch Check Mode) (see page 05-1101).

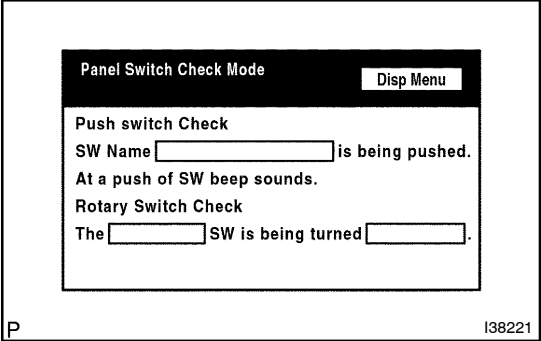

- (b) Operate the abnormal switch and check if the switch name and status are correctly displayed.
OK: The switch name and status are correctly displayed as operated.

OK REPLACE RADIO AND NAVIGATION ASSY (SEE PAGE 67-1)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1094)