

TOUCH PANEL SWITCH DOES NOT FUNCTION

INSPECTION PROCEDURE

1 CHECK TOUCH PANEL

- (a) Check for dirt on the display surface.

OK: The display surface is clean.


NG

REMOVE ANY DIRT FOUND AND RECHECK TOUCH PANEL

OK

2 DISPLAY CHECK MODE(TOUCH SWITCH CHECK)

- (a) Enter the "Display Check" mode (Touch Switch Check) ([see page 05-1100](#)).

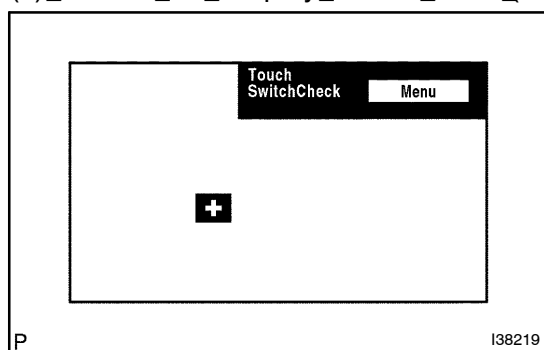

- (b) Touch the display in the area where the abnormal switch occurs.

OK: A "+" mark appears at the touched position.

OK

**REPLACE RADIO AND NAVIGATION ASSY
([SEE PAGE 67-1](#))**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
([SEE PAGE 05-1094](#))**