


POOR SOUND QUALITY IN ALL MODES (LOW VOLUME)

INSPECTION PROCEDURE

1 CHECK AUDIO SETTINGS

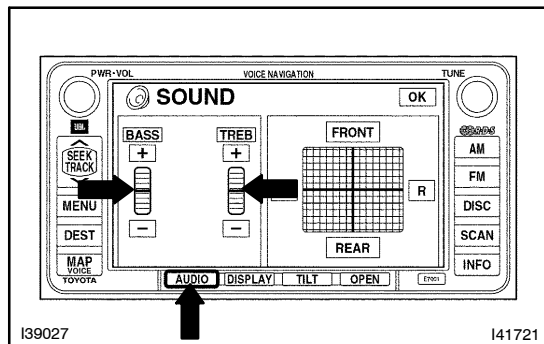

(a) Enter the sound adjustment screen by pressing the "SOUND" switch on the AUDIO display.

(b) Set "BASS" and "TREB" to the initial values and check if sound is normal.

OK: Returns to normal.

HINT:

Sound quality adjustment items vary depending on the type of the amplifier.

OK **END**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1094)